

ENTOUR SNOW DMX TRAITS

Entour Snow		1 Channel Mode
Channel	Value	Function
1	0 - 249 250 - 255	OUTPUT VOLUME 0%-100% OUTPUT AUTO RANDOM SHOW

Note: The Wind (fan) speed needs to be set using the control panel.

Entour Snow		3 Channel Mode
Channel	Value	Function
1	0 - 249 250 - 255	OUTPUT VOLUME 0%-100% OUTPUT AUTO RANDOM SHOW
2	0 - 124 125 - 249 250 - 255	FAN SPEED 50% FAN SPEED 100% FAN SPEED AUTO RANDOM SPEED
3	0 - 127 128 - 255	SNOW ON/OFF SNOW OFF SNOW ON

Entour Snow		5 Channel Mode
Channel	Value	Function
1	0 - 249 250 - 255	OUTPUT VOLUME 0%-100% OUTPUT AUTO RANDOM SHOW
2	0 - 124 125 - 249 250 - 255	FAN SPEED 50% FAN SPEED 100% FAN SPEED AUTO RANDOM SPEED
3	0 - 127 128 - 255	SNOW ON/OFF SNOW OFF SNOW ON
4	0 - 255	DURATION 0-255 SECONDS
5	0 - 255	INTERVAL 0-2550 SECONDS