

DMX CHANNEL FUNCTIONS AND VALUES

DMX CHANGE WITH SOFTWARE UPDATE VERSION ≥ 1.3

See highlighted items below which have been updated with this software update.

Supports Software Versions: ≥ 1.3							
Features subject to change without any prior written notice. *Pixel control of effects depends on fixture orientation.							
MODE / CHANNEL						VALUE	FUNCTION
1CH	2CH	2ACH	3CH	4CH	6CH		
1	1		1	1		0-255	MASTER DIMMER - LEFT & RIGHT PIXELS 0-100%
	2		2	2		0-256	DIMMER FINE (16-BIT) - LEFT & RIGHT PIXELS 16-bit FINE Adjustment
		1			1	0-255	MASTER DIMMER - LEFT PIXEL 0-100%
		2			2	0-255	MASTER DIMMER - RIGHT PIXEL 0-100%
					4	0-255	MASTER DIMMER / INTENSITY Dimmer (0-100%)
					5	0-255	MASTER DIMMER / INTENSITY FINE Dimmer (0-100%)
				3	3		SHUTTER / STROBE
						0-31	LED OFF
						32-63	LED ON
						64-95	Strobe Effect SLOW to FAST
						96-127	LED ON
						128-159	Strobe Pulse Effect In Sequences SLOW to FAST
						160-191	LED ON
						192-223	Random Strobe Effect SLOW to FAST
						224-255	LED ON
			3	4	6		DIMMING MODES
						0-20	STANDARD
						21-40	STAGE
						41-60	TV
						61-80	ARCHITECTURAL
						81-100	THEATER
						101-120	STAGE 2
						121-255	DEFAULT TO UNIT SETTING