

Channel Mode:**4 Channel Mode**

Channel	Value	Function
1 R	0-255	Dimmer 0-+100%
2 G	0-255	Dimmer 0-+100%
3 B	0-255	Dimmer 0-+100%
4 W	0-255	Dimmer 0-+100%

5 Channel Mode

Channel	Value	Function
1 R	0-255	Dimmer 0-+100%
2 G	0-255	Dimmer 0-+100%
3 B	0-255	Dimmer 0-+100%
4 W	0-255	Dimmer 0-+100%
5	0-255	Total Dimmer 0-+100%

6 Channel Mode

Channel	Value	Function
1 R	0-255	Dimmer 0-+100%
2 G	0-255	Dimmer 0-+100%
3 B	0-255	Dimmer 0-+100%
4 W	0-255	Dimmer 0-+100%
5	0-255	Total Dimmer 0-+100%
6	0-255	Dimming Fine

7 Channel Mode

Channel	Value	Function
1 R	0-255	Dimmer 0--+100%
2 G	0-255	Dimmer 0--+100%
3 B	0-255	Dimmer 0--+100%
4 W	0-255	Dimmer 0--+100%
5 Strobe	0-31	Shutter Closed (LEDs OFF)
	32-63	Shutter OPEN (LEDs ON)
	64-95	Strobe Effect Slow to Fast
	96-127	Shutter OPEN (LEDs ON)
	128-159	Strobe Pulse Slow to Fast
	160-191	Shutter OPEN (LEDs ON)
	192-223	Random Strobe Slow to Fast
	224-255	Shutter OPEN (LEDs ON)
6	0-255	Total Dimmer 0--+100%
7	0-255	Dimming fine

8 Channel Mode

Channel	Value	Function
1 R	0-255	Dimmer 0--+100%
2 G	0-255	Dimmer 0--+100%
3 B	0-255	Dimmer 0--+100%
4 W	0-255	Dimmer 0--+100%
5 Strobe	0-31	Shutter Closed (LEDs OFF)
	32-63	Shutter OPEN (LEDs ON)
	64-95	Strobe Effect Slow to Fast
	96-127	Shutter OPEN (LEDs ON)
	128-159	Strobe Pulse Slow to Fast
	160-191	Shutter OPEN (LEDs ON)
	192-223	Random Strobe Slow to Fast
	224-255	Shutter OPEN (LEDs ON)
6	0-255	Total Dimmer 0--+100%
7	0-255	Dimming fine
8 Dim Curves	0-20	Standard
	21-40	Stage
	41-60	TV
	61-80	Architectural
	81-100	Theater
	101-120	Stage 2
	121-255	Default to unit curve setting

9 Channel Mode

Channel	Value	Function
1 R	0-255	Dimmer 0→100%
2 G	0-255	Dimmer 0→100%
3 B	0-255	Dimmer 0→100%
4 W	0-255	Dimmer 0→100%
5 Color Macros	1-4	Color Macro 1 129-132 Color Macro 33
	5-8	Color Macro 2 133-136 Color Macro 34
	9-12	Color Macro 3 137-140 Color Macro 35
	13-16	Color Macro 4 141-144 Color Macro 36
	17-20	Color Macro 5 145-148 Color Macro 37
	21-24	Color Macro 6 149-152 Color Macro 38
	25-28	Color Macro 7 153-156 Color Macro 39
	29-32	Color Macro 8 157-160 Color Macro 40
	33-36	Color Macro 9 161-164 Color Macro 41
	37-40	Color Macro 10 165-168 Color Macro 42
	41-44	Color Macro 11 169-172 Color Macro 43
	45-48	Color Macro 12 173-176 Color Macro 44
	49-52	Color Macro 13 177-180 Color Macro 45
	53-56	Color Macro 14 181-184 Color Macro 46
	57-60	Color Macro 15 185-188 Color Macro 47
	61-64	Color Macro 16 189-192 Color Macro 48
	65-68	Color Macro 17 193-196 Color Macro 49
	69-72	Color Macro 18 197-200 Color Macro 50
	73-76	Color Macro 19 201-204 Color Macro 51
	77-80	Color Macro 20 205-208 Color Macro 52
	81-84	Color Macro 21 209-212 Color Macro 53
	85-88	Color Macro 22 213-216 Color Macro 54
	89-92	Color Macro 23 217-220 Color Macro 55
	93-96	Color Macro 24 221-224 Color Macro 56
	97-100	Color Macro 25 225-228 Color Macro 57
	101-104	Color Macro 26 229-232 Color Macro 58
	105-108	Color Macro 27 233-236 Color Macro 59
	109-112	Color Macro 28 237-240 Color Macro 60
	113-116	Color Macro 29 241-244 Color Macro 61
	117-120	Color Macro 30 245-248 Color Macro 62
	121-124	Color Macro 31 249-252 Color Macro 63
	125-128	Color Macro 32 253-255 Color Macro 64
6 Strobe	0-31	Shutter Closed(LEDs OFF)
	32-63	Shutter OPEN(LEDs ON)
	64-95	Strobe effect slow to fast
	96-127	Shutter OPEN(LEDs ON)
	128-159	Strobe Pulse Slowto Fast
	160-191	Shutter OPEN(LEDs ON)
	192-223	Random strobe Slow toFast
	224-255	Shutter OPEN(LEDs ON)
7	0-255	Total Dimmer 0→100%
8	0-255	Dimming fine
9 Dim Curves	0-20	Standard
	21-40	Stage
	41-60	TV
	61-80	Architectural
	81-100	Theatre
	101-120	Stage 2
121-255	Default to unit curve setting	