

# DMX CHANNELS/VALUES/FUNCTIONS

MODE / CHANNEL							Value	Function
Ch01	Ch02	Ch04	Ch4A	Ch05	Ch06	Ch07		
	1	1	1	1	1	1	0-255	COOL WHITE 0% - 100%
			2				0-255	COOL WHITE FINE 16-BIT DIMMING 0% - 100%
	2	2	3	2	2	2	0-255	WARM WHITE 0% - 100%
			4				0-255	WARM WHITE FINE 16-BIT DIMMING 0% - 100%
1				3	3	3	0-255	VARIABLE WHITE 0 = OFF, 3200K to 6400K Linear
					4	4	0-31 32-63 64-95 96-127 128-159 160-191 192-223 224-255	STROBE LED OFF LED ON STROBE SLOW->FAST LED ON STROBE PULSE SLOW->FAST LED ON RANDOM STROBE SLOW->FAST LED ON
		3		4	5	5	0-255	MASTER DIMMER 0% - 100%
		4		5	6	6	0-255	MASTER DIMMER FINE 16-BIT DIMMING 0% - 100%
						7	0-20 21-40 41-60 61-80 81-100 101-120 121-255	DIMMER MODES STANDARD STAGE TV ARCHITECTURAL THEATRE STAGE 2 DEFAULT TO UNIT SETTING