

ADJ ENCORE BURST RGBW IP - DMX MODES

CHANNEL					DMX VALUES	DESCRIPTION
4-CH	6-CH	7-CH	8-CH	11-CH		
1	1	1	1	1	000 - 255	Red , 0-100%
2	2	2	2	2	000 - 255	Green , 0-100%
3	3	3	3	3	000 - 255	Blue , 0-100%
4	4	4	4	4	000 - 255	White , 0-100%
						Color Macros
					000 - 007	No effect
					008 - 015	Moroccan pink
					016 - 022	Pink
					023 - 030	Special rose pink
					031 - 037	Fillies pink
					038 - 045	Fuchsia pink
					046 - 052	Surprise pink
					053 - 060	Congo blue
					061 - 067	Tokyo blue
					068 - 075	Deep blue
					076 - 082	Just blue
					083 - 090	Medium blue
				5	091 - 097	Double CT blue
					098 - 105	State blue
					106 - 112	Full CT blue
					113 - 120	Half CT blue
					121 - 127	Steel blue
					128 - 135	Lighter blue
					136 - 142	Light blue
					143 - 150	Medium blue green
					151 - 157	Dark green
					158 - 165	Primary green
					166 - 172	Moss green
					173 - 180	Fern green
					181 - 187	JAS green
					188 - 195	Lime Green

CONTINUED ON NEXT PAGE

ADJ ENCORE BURST RGBW IP - DMX MODES

CHANNEL					DMX VALUES	DESCRIPTION
4-CH	6-CH	7-CH	8-CH	11-CH		
						Color Macros (cont'd from prev page)
				5	196 - 202	Spring yellow
				5	203 - 210	Deep amber
				5	211 - 217	Chrome orange
				5	218 - 225	Orange
				5	226 - 232	Gold amber
				5	233 - 240	Millennium gold
				5	241 - 247	Deep gold amber
				5	248 - 255	Flame red
						Shutter
				6	000 - 031	Shutter closed (LEDs off)
				6	032 - 063	Shutter open (LEDs on)
		5	5	6	064 - 095	Strobe effect, slow to fast
				6	096 - 127	Shutter open (LEDs on)
				6	128 - 159	Pulse effect in sequences
				6	160 - 191	Shutter open (LEDs on)
				6	192 - 223	Random strobe effect, slow to fast
				6	224 - 255	Shutter open (LEDs on)
	5	6	6	7	000 - 255	Dimmer , 0-100%
	6	7	7	8	000 - 255	Dimmer Fine
						Dim Modes
				9	000 - 020	Standard
				9	021 - 040	Stage
				9	041 - 060	TV
			8	9	061 - 080	Architectural
				9	081 - 100	Theatre
				9	101 - 120	Stage 2
				9	121 - 140	Dim speed, fast to slow (0.1s-10.0s)
				9	141 - 255	Default

CONTINUED ON NEXT PAGE

ADJ ENCORE BURST RGBW IP - DMX MODES

CHANNEL					DMX VALUES	DESCRIPTION
4-CH	6-CH	7-CH	8-CH	11-CH		
				10		<i>Refresh Rates</i>
					000 - 015	Default
					016 - 030	900 Hz
					031 - 045	1000 Hz
					046 - 060	1100 Hz
					061 - 075	1200 Hz
					076 - 090	1300 Hz
					091 - 105	1400 Hz
					106 - 120	1500 Hz
					121 - 135	2500 Hz
					136 - 150	4000 Hz
					151 - 165	5000 Hz
					166 - 180	6000 Hz
					181 - 255	No function
				11		<i>Gamma</i>
					000 - 020	Default
					021 - 040	1.0
					041 - 060	2.0
					061 - 080	2.2
					081 - 100	2.4
					101 - 120	2.6
					121 - 130	2.8
				131 - 255	No function	