

13 CH	15 CH	16 CH	VALUES	FUNCTIONS
1	1	1	000-255	<b>PAN MOVEMENT (8-BIT)</b> 0-100% (0°-540°)
	2	2	000-255	<b>PAN FINE (16-BIT)</b>
2	3	3	000-255	<b>TILT MOVEMENT (8-BIT)</b> 0-100% (0°-200°)
	4	4	000-255	<b>TILT FINE (16-BIT)</b>
3	5	5	000-255	<b>RED</b> 0-100%
4	6	6	000-255	<b>GREEN</b> 0-100%
5	7	7	000-255	<b>BLUE</b> 0-100%
6	8	8	000-255	<b>WHITE</b> 0-100%
				<b>VARIABLE WHITE COLOR TEMPERATURE</b>
			000-005	No Function
			006-019	3000K
			020-084	3200K
			085-116	4000K
			117-149	4500K
			150-179	5000K
			180-209	5500K
			210-255	6000K
				<b>SHUTTER &amp; STROBING</b>
			000-031	LED OFF
			032-063	LED ON
			064-095	STROBING SLOW-FAST
			096-127	LED ON
			128-159	PULSE EFFECT IN SEQUENCES
			160-191	LED ON
			192-223	RANDOM STROBING SLOW-FAST
			224-255	LED ON
9	11	11	000-255	<b>MASTER DIMMER</b> 0-100%
10	12	12	000-255	<b>DIMMER FINE</b> 0-100%
11	13	13	000-255	<b>ZOOM</b> 9°-37°

13 CH	15 CH	16 CH	VALUES	FUNCTIONS
				<b>DIMMER MODES</b>
			000-020	Standard
			021-040	Stage
			041-060	TV
			061-080	Architectural
			081-100	Theatre
			101-120	Stage 2
				<b>DIMMER DELAY TIME</b>
		14	121	0.1Sec.
			122	0.2Sec.
			123	0.3Sec.
			124	0.4Sec.
			125	0.5Sec.
			126	0.6Sec.
			127	0.7Sec.
			128	0.8Sec.
			129	0.9Sec.
			130	1.0Sec.
			131	1.5Sec.
			132	2.0Sec.
			133	3.0Sec.
			134	4.0Sec.
			135	5.0Sec.
			136	6.0Sec.
			137	7.0Sec.
		138	8.0Sec.	
		139	9.0Sec.	
		140	10Sec.	
		141-255	Default to Unit Setting	
12	14	15	000-255	<b>PAN/TILT MOVEMENT SPEED</b> Slow - Fast
13	15	16		<b>SPECIAL FUNCTIONS</b>
			000-010	Default LED Refresh Rate (1200Hz)
			011-020	900Hz Refresh Rate
			021-030	1000Hz Refresh Rate
			031-040	1100Hz Refresh Rate
			041-050	1300Hz Refresh Rate
			051-060	1400Hz Refresh Rate
			061-070	1500Hz Refresh Rate
			071-080	Disable LED Refresh Rate
			081-090	Enable Blackout w/ Pan/Tilt Movement
			091-100	Disable Blackout w/ Pan/Tilt Movement
			101-110	Reset All
			111-120	Reset Zoom
			121-130	Reset Pan/Tilt
131-255	No Function			