

CHANNEL				DMX VALUE	FUNCTION
2CH	4CH	6CH	8CH		
					Shutter
				000 - 031	Shutter Closed (LEDs Off)
				032 - 063	Shutter Open (LEDs On)
				064 - 095	Strobe Effect, slow to fast
	1	1	1	096 - 127	Shutter Open (LEDs On)
				128 - 159	Pulse Effect in Sequences
				160 - 191	Shutter Open (LEDs On)
				192 - 223	Random Strobe Effect, slow to fast
				224 - 255	Shutter Open (LEDs On)
1	2	2	2	000 - 255	Dimmer Intensity , 0% to 100%
2		3	3	000 - 255	Dimmer Fine
	3	4	4	000 - 255	Zoom , wide to narrow
			5	000 - 255	Zoom Fine
					Dim Modes
				000 - 020	Default to unit setting
				021 - 040	Standard
				041 - 060	Stage
				061 - 080	TV
				081 - 100	Architectural
				101 - 120	Theatre
				121 - 140	Stage 2
					Dimming Speed
				141	0.1 s
				142	0.2 s
		5	6	143	0.3 s
				144	0.4 s
				145	0.5 s
				146	0.6 s
				147	0.7 s
				148	0.8 s
				149	0.9 s
				150	1.0 s
				151	1.5 s
				152	2.0 s
				153	3.0 s
				154	4.0 s

CONTINUED ON NEXT PAGE

ADJ ENCORE FR PRO WW - DMX TRAITS

CHANNEL				DMX VALUES	FUNCTION
2CH	4CH	6CH	8CH		
		5	6		<i>Dimming Speed (continued)</i>
				155	5.0 s
				156	6.0 s
				157	7.0 s
				158	8.0 s
				159	9.0 s
				160	10.0 s
				161 - 255	
			7		<i>Dim Curves</i>
				000 - 020	Square
				021 - 040	Linear
				041 - 060	Inv. Squa
				061 - 080	S. Curve
				081 - 255	No function
	4	6	8		<i>Special Functions</i>
				000 - 010	Default LED Refresh Rate (1200 Hz)
				011	900 Hz
				012	910 Hz
				013	920 Hz
				014	930 Hz
				015	940 Hz
				016	950 Hz
				017	960 Hz
				018	970 Hz
				019	980 Hz
				020	990 Hz
				021	1000 Hz
				022	1010 Hz
				023	1020 Hz
				024	1030 Hz
				025	1040 Hz
				026	1050 Hz
				027	1060 Hz
				028	1070 Hz
	029	1080 Hz			
	030	1090 Hz			

CONTINUED ON NEXT PAGE

ADJ ENCORE FR PRO WW - DMX TRAITS

CHANNEL				DMX VALUES	FUNCTION
2CH	4CH	6CH	8CH		
					<i>Special Functions (continued)</i>
				031	1100 Hz
				032	1110 Hz
				033	1120 Hz
				034	1130 Hz
				035	1140 Hz
				036	1150 Hz
				037	1160 Hz
				038	1170 Hz
				039	1180 Hz
				040	1190 Hz
				041	1210 Hz
				042	1220 Hz
				043	1230 Hz
				044	1240 Hz
				045	1250 Hz
				046	1260 Hz
				047	1270 Hz
				048	1280 Hz
				049	1290 Hz
				050	1300 Hz
				051	1310 Hz
				052	1320 Hz
				053	1330 Hz
				054	1340 Hz
				055	1350 Hz
				056	1360 Hz
				057	1370 Hz
				058	1380 Hz
				059	1390 Hz
				060	1400 Hz
				061	1410 Hz
				062	1420 Hz
				063	1430 Hz
				064	1440 Hz
				065	1450 Hz

CONTINUED ON NEXT PAGE

ADJ ENCORE FR PRO WW - DMX TRAITS

CHANNEL				DMX VALUES	FUNCTION
2CH	4CH	6CH	8CH		
					<i>Special Functions (continued)</i>
				066	1460 Hz
				067	1470 Hz
				068	1480 Hz
				069	1490 Hz
				070	1500 Hz
				071	2500 Hz
				072	4000 Hz
				073	5000 Hz
				074	6000 Hz
	4	6	8	075	10 KHz
				076	15 KHz
				077	20 KHz
				078	25 KHz
				079	Disable LED Refresh Rate
				080 - 089	Zoom Reset
				090 - 099	No Function
				100 - 105	Fan Mode Low
				106 - 111	Fan Mode High
				112 - 117	Fan Mode Auto
				118 - 255	No Function