

# ELIMINATOR STINGER SPOT 30 - DMX TRAITS

CHANNEL		DMX VALUES	FUNCTION
4CH	12CH		
1	1	000 - 255	<b><i>Pan</i></b>
	2	000 - 255	<b><i>Pan Fine</i></b>
2	3	000 - 255	<b><i>Tilt</i></b>
	4	000 - 255	<b><i>Tilt Fine</i></b>
	5		<b><i>Color</i></b>
		000 - 007	Open (White)
		008 - 014	Red
		015 - 021	Orange
		022 - 028	Yellow
		029 - 035	Green
		036 - 042	Blue
		043 - 049	Cyan
		050 - 056	Magenta
		057 - 068	Magenta - Cyan
		069 - 080	Cyan - Blue
		081 - 092	Blue - Green
		093 - 104	Green - Yellow
		105 - 116	Yellow - Orange
		117 - 127	Orange - Red
128 - 255	Color Wheel Scroll, fast to slow		
	6		<b><i>Gobos</i></b>
		000 - 011	Open (Spot)
		012 - 023	Gobo1
		024 - 035	Gobo2
		036 - 047	Gobo3
		048 - 059	Gobo4
		060 - 071	Gobo5
		072 - 083	Gobo6
		084 - 095	Gobo7
		096 - 111	Gobo1 Shake, slow to fast
		112 - 127	Gobo2 Shake, slow to fast
		128 - 143	Gobo3 Shake, slow to fast
		144 - 159	Gobo4 Shake, slow to fast
		160 - 175	Gobo5 Shake, slow to fast
		176 - 191	Gobo6 Shake, slow to fast
192 - 255	Gobo Scroll, slow to fast		

CONTINUED ON NEXT PAGE

# ELIMINATOR STINGER SPOT 30 - DMX TRAITS

CHANNEL		DMX VALUES	FUNCTION
4CH	12CH		
	7		<b>Shutter</b>
		000 - 004	Shutter Closed
		005 - 250	Strobe Effect, slow to fast
		251 - 255	Shutter Open
	8	000 - 255	<b>Dimmer</b> , 0% to 100%
3	9		<b>Programs</b>
		000 - 007	Empty
		008 - 047	Auto Play 1
		048 - 087	Auto Play 2
		088 - 127	Auto Play 3
		128 - 167	Auto Play 4
		168 - 207	Auto Play 5
		208 - 247	Auto Play 6
	248 - 255	Color/Gobo Sound Control	
	10	000 - 255	<b>Pan/Tilt Speed</b>
4	11		<b>Pan/Tilt Programs</b>
		000 - 007	Empty
		008 - 032	Pan/Tilt Auto Run 1
		033 - 058	Pan/Tilt Auto Run 2
		059 - 084	Pan/Tilt Auto Run 3
		085 - 110	Pan/Tilt Auto Run 4
		111 - 136	Pan/Tilt Auto Run 5
		137 - 162	Pan/Tilt Auto Run 6
		163 - 188	Pan/Tilt Auto Run 7
		189 - 214	Pan/Tilt Auto Run 8
		215 - 240	Pan/Tilt Auto Run 9
	241 - 255	Pan/Tilt Sound Control	
	12		<b>Reset</b>
		000 - 250	No function
		251 - 255	Reset (10s)