

ADJ ENCORE PROFILE MINI WW - DMX TRAITS

CHANNEL			DMX VALUE	FUNCTION
2CH	3CH	6CH		
1	1	1	000 - 255	<i>Dimmer Intensity</i> , 0% to 100%
2	2	2	000 - 255	<i>Dimmer Fine</i>
	3	3		Shutter
			000 - 031	Shutter Closed (LEDs Off)
			032 - 063	Shutter Open (LEDs On)
			064 - 095	Strobe Effect, slow to fast
			096 - 127	Shutter Open (LEDs On)
			128 - 159	Pulse Effect in Sequences
			160 - 191	Shutter Open (LEDs On)
			192 - 223	Random Strobe Effect, slow to fast
			224 - 255	Shutter Open (LEDs On)
	4	4		Dim Modes
			000 - 020	Default to unit setting
			021 - 040	Standard
			041 - 060	Stage
			061 - 080	TV
			081 - 100	Architectural
			101 - 120	Theatre
			121 - 140	Stage 2
				Dimming Speed
			141	0.1s
			142	0.2s
			143	0.3s
			144	0.4s
			145	0.5s
			146	0.6s
			147	0.7s
			148	0.8s
			149	0.9s
			150	1.0s
			151	1.5s
			152	2.0s
			153	3.0s
			154	4.0s
155	5.0s			
156	6.0s			
157	7.0s			
158	8.0s			
159	9.0s			
160	10.0s			
161 - 255	Default to unit setting			

CONTINUED ON NEXT PAGE

ADJ ENCORE PROFILE MINI WW - DMX TRAITS

CHANNEL			DMX VALUE	FUNCTION
2CH	3CH	6CH		
		5		<i>Dim Curves</i>
			000 - 020	Square
			021 - 040	Linear
			041 - 060	Inv. Squa
			061 - 080	S. Curve
			081 - 255	No function
		6		<i>LED Refresh Rates</i>
			000 - 010	Default Refresh Rate (1200 Hz)
			011	900 Hz
			012	910 Hz
			013	920 Hz
			014	930 Hz
			015	940 Hz
			016	950 Hz
			017	960 Hz
			018	970 Hz
			019	980 Hz
			020	990 Hz
			021	1000 Hz
			022	1010 Hz
			023	1020 Hz
			024	1030 Hz
			025	1040 Hz
			026	1050 Hz
			027	1060 Hz
			028	1070 Hz
			029	1080 Hz
			030	1090 Hz
			031	1100 Hz
			032	1110 Hz
		033	1120 Hz	
		034	1130 Hz	
		035	1140 Hz	
		036	1150 Hz	
		037	1160 Hz	
		038	1170 Hz	
		039	1180 Hz	
		040	1190 Hz	
		041	1210 Hz	
		042	1220 Hz	
		043	1230 Hz	

CONTINUED ON NEXT PAGE

ADJ ENCORE PROFILE MINI WW - DMX TRAITS

CHANNEL			DMX VALUE	FUNCTION
2CH	3CH	6CH		
				<i>LED Refresh Rates (continued)</i>
			044	1240 Hz
			045	1250 Hz
			046	1260 Hz
			047	1270 Hz
			048	1280 Hz
			049	1290 Hz
			050	1300 Hz
			051	1310 Hz
			052	1320 Hz
			053	1330 Hz
			054	1340 Hz
			055	1350 Hz
			056	1360 Hz
			057	1370 Hz
			058	1380 Hz
			059	1390 Hz
			060	1400 Hz
		6	061	1410 Hz
			062	1420 Hz
			063	1430 Hz
			064	1440 Hz
			065	1450 Hz
			066	1460 Hz
			067	1470 Hz
			068	1480 Hz
			069	1490 Hz
			070	1500 Hz
			071	2500 Hz
			072	4000 Hz
			073	5000 Hz
			074	6000 Hz
			075	10 KHz
			076	15 KHz
			077	20 KHz
			078	25 KHz
			079 - 255	No Function