

ELIMINATOR STRYKER WASH - DMX TRAITS

CHANNEL		DMX VALUES	FUNCTION
13Ch	23Ch		
1	1	000 - 255	Pan , 0 to 540
	2	000 - 255	Pan Fine
2	3	000 - 255	Tilt , 0 to 270
	4	000 - 255	Tilt Fine
3		000 - 255	All Red , 0% to 100%
4		000 - 255	All Green , 0% to 100%
5		000 - 255	All Blue , 0% to 100%
6		000 - 255	All White , 0% to 100%
	5	000 - 255	Red 1 , 0% to 100%
	6	000 - 255	Green 1 , 0% to 100%
	7	000 - 255	Blue 1 , 0% to 100%
	8	000 - 255	White 1 , 0% to 100%
	9	000 - 255	Red 2 , 0% to 100%
	10	000 - 255	Green 2 , 0% to 100%
	11	000 - 255	Blue 2 , 0% to 100%
	12	000 - 255	White 2 , 0% to 100%
	13	000 - 255	Red 3 , 0% to 100%
	14	000 - 255	Green 3 , 0% to 100%
	15	000 - 255	Blue 3 , 0% to 100%
	16	000 - 255	White 3 , 0% to 100%
7	17		Linear CT
		000 - 009	No function
		010 - 255	Linear 3200K to 10000K
8	18		Ring Macros
		000 - 007	No function
		008 - 012	Static 1
		013 - 017	Static 2
		018 - 022	Static 3
		023 - 027	Static 4
		028 - 032	Static 5
		033 - 037	Static 6
		038 - 042	Static 7
		043 - 047	Static 8
		048 - 052	Static 9
		053 - 057	Static 10
		058 - 062	Static 11
063 - 067	Static 12		

CONTINUED ON NEXT PAGE

ELIMINATOR STRYKER WASH - DMX TRAITS

CHANNELS		DMX VALUES	FUNCTION
13Ch	23Ch		
8	18		<i>Ring Macros (continued)</i>
		068 - 072	Static 13
		073 - 077	Static 14
		078 - 082	Static 15
		083 - 087	Static 16
		088 - 092	Static 17
		093 - 097	Static 18
		098 - 102	Static 19
		103 - 107	Static 20
		108 - 112	Static 21
		113 - 117	Static 22
		118 - 122	Static 23
		123 - 181	Color Jump, slow to fast
		182 - 240	Color Fade, slow to fast
241 - 255	Sound Auto Play		
9	19		<i>Shutter</i>
		000 - 009	Shutter Closed
		010 - 250	Strobe Effect, slow to fast
		251 - 255	Shutter Open
10	20	000 - 255	<i>Dimmer</i> , 0% to 100%
11	21	000 - 255	<i>Zoom</i> , minimum to maximum
12	22	000 - 255	<i>Pan/Tilt Speed</i> , fast to slow
13	23		<i>Special Functions</i>
		000 - 010	No Function
		011 - 020	XY Auto Run 1
		021 - 030	XY Auto Run 2
		031 - 040	XY Auto Run 3
		041 - 050	XY Auto Run 4
		051 - 060	XY Auto Run 5
		061 - 070	XY Auto Run 6
		071 - 080	XY Auto Run 7
		081 - 090	XY Auto Run 8
		091 - 230	Sound XY Auto Run
		231 - 240	Reset after 3 seconds
		241 - 255	No function