

## ELIMINATOR STRYKER BEAM - DMX TRAITS

CHANNEL		DMX VALUES	FUNCTION
13Ch	19Ch		
1	1	000 - 255	<i>Pan</i> , 0 - 540
	2	000 - 255	<i>Pan Fine</i>
2	3	000 - 255	<i>Tilt</i> , 0 - 225
	4	000 - 255	<i>Tilt Fine</i>
3	5		<i>Color</i>
		000 - 004	White
		005 - 009	White + Red
		010 - 014	Red
		015 - 019	Red + Orange
		020 - 024	Orange
		025 - 029	Orange + Blue
		030 - 034	Blue
		035 - 039	Blue + Green
		040 - 044	Green
		045 - 049	Green + Yellow
		050 - 054	Yellow
		055 - 059	Yellow + Carmine
		060 - 064	Carmine
		065 - 069	Carmine + Royal Blue
		070 - 074	Royal Blue
		075 - 079	Royal Blue + Pink
		080 - 084	Pink
		085 - 089	Pink + Reseda
		090 - 094	Reseda
		095 - 099	Reseda + Silver
		100 - 104	Silver
		105 - 109	Silver + Light Yellow
		110 - 114	Light Yellow
		115 - 119	Light Yellow + Orange Yellow
		120 - 124	Orange Yellow
125 - 129	Orange Yellow + Purple		
130 - 134	Purple		
135 - 139	Purple + White		
140 - 149	White		
150 - 199	Clockwise Rotation (fast to slow)		
200 - 205	Stop		
206 - 255	Counter Clockwise Rotation (slow to fast)		

CONTINUED ON NEXT PAGE

## ELIMINATOR STRYKER BEAM - DMX TRAITS

CHANNEL		DMX VALUES	FUNCTION
13Ch	19Ch		
4	6		<b><i>Gobo</i></b>
		000 - 009	Open
		010 - 019	Gobo1
		020 - 029	Gobo2
		030 - 039	Gobo3
		040 - 049	Gobo4
		050 - 059	Gobo5
		060 - 069	Gobo6
		070 - 079	Gobo7
		080 - 089	Gobo8
		090 - 099	Gobo9
		100 - 109	Gobo10
		110 - 119	Gobo11
		120 - 127	Gobo1 Shake, slow to fast
		128 - 135	Gobo2 Shake, slow to fast
		136 - 143	Gobo3 Shake, slow to fast
		144 - 151	Gobo4 Shake, slow to fast
		152 - 159	Gobo5 Shake, slow to fast
		160 - 167	Gobo6 Shake, slow to fast
		168 - 175	Gobo7 Shake, slow to fast
		176 - 183	Gobo8 Shake, slow to fast
		184 - 191	Gobo9 Shake, slow to fast
		192 - 199	Gobo10 Shake, slow to fast
200 - 207	Gobo11 Shake, slow to fast		
208 - 230	Clockwise Rotation, fast to slow		
231 - 232	Stop		
233 - 255	Counter Clockwise Rotation, slow to fast		
5	7		<b><i>Shutter</i></b>
		000 - 003	Off
		004 - 127	Strobe, slow to fast
		128 - 191	Pulse Strobe, slow to fast
		192 - 251	Random Strobe, slow to fast
		252 - 255	Open
6	8	000 - 255	<b><i>Dimmer</i></b> , 0% to 100%
7	9	000 - 255	<b><i>Focus</i></b> , far to near
CONTINUED ON NEXT PAGE			

## ELIMINATOR STRYKER BEAM - DMX TRAITS

CHANNEL		DMX VALUES	FUNCTION
13Ch	19Ch		
			<b><i>Prism 1</i></b>
	10	000 - 127	Off
		128 - 255	On
			<b><i>Prism 1 Rotation</i></b>
	11	000 - 063	Prism Index, 0° - 400°
		064 - 126	Clockwise Rotation, fast to slow
		127 - 128	Stop
		129 - 191	Counter Clockwise Rotation, slow to fast
		192 - 255	Bi-directional Rotation, slow to fast
			<b><i>Prism 2</i></b>
	12	000 - 127	Off
		128 - 255	On
			<b><i>Prism 2 Rotation</i></b>
	13	000 - 063	Prism Index, 0° - 400°
		064 - 126	Clockwise Rotation, fast to slow
		127 - 128	Stop
		129 - 191	Counter Clockwise Rotation, slow to fast
		192 - 255	Bi-directional Rotation, slow to fast
			<b><i>Frost</i></b>
8	14	000 - 127	Off
		128 - 255	On
			<b><i>7 Color</i></b>
9	15	000	Off
		001 - 255	On
			<b><i>Effect Auto</i></b>
10	16	000 - 127	Off
		128 - 255	Auto Run On
			<b><i>Pan/Tilt Auto</i></b>
11	17	000 - 127	Off
		128 - 255	Auto Run On
12	18	000 - 255	<b><i>Pan/Tilt Speed</i></b> , fast to slow
			<b><i>Reset</i></b>
	19	000 - 021	Off
13		022 - 025	No function
		026 - 076	Reset Effect (hold 3s)
		077 - 128	Reset Pan/Tilt Motor (hold 3s)
		129 - 255	Reset All (hold 3s)