

# ELIMINATOR STRYKER SPOT - DMX TRAITS

CHANNEL		DMX VALUES	FUNCTION
16Ch	18Ch		
1	1	000 - 255	<b>Pan</b> , 8-bit, 0° - 540°
	2	000 - 255	<b>Pan Fine</b> , 16-bit
2	3	000 - 255	<b>Tilt</b> , 8-bit, 0° - 210°
	4	000 - 255	<b>Tilt Fine</b> , 16-bit
3	5		<b>Color</b>
		000 - 004	White
		005 - 013	White + Color1
		014 - 022	Color1
		023 - 031	Color1 + Color2
		032 - 040	Color2
		041 - 049	Color2 + Color3
		050 - 058	Color3
		059 - 067	Color3 + Color4
		068 - 076	Color4
		077 - 085	Color4 + Color5
		086 - 094	Color5
		095 - 103	Color5 + Color6
		104 - 112	Color6
		113 - 121	Color6 + Color7
		122 - 130	Color7
		131 - 139	White
		140 - 195	Clockwise Rotation, fast to slow
196 - 199	Stop		
200 - 255	Counter-clockwise Rotation, slow to fast		
4	6		<b>Gobo Wheel 1</b>
		000 - 007	Open
		008 - 015	Gobo 1
		016 - 023	Gobo 2
		024 - 031	Gobo 3
		032 - 039	Gobo 4
		040 - 047	Gobo 5
		048 - 055	Gobo 6
		056 - 063	Gobo 7
		064 - 077	Gobo 8
		078 - 085	Gobo 1 Shake, slow to fast
		086 - 093	Gobo 2 Shake, slow to fast
		094 - 101	Gobo 3 Shake, slow to fast
		102 - 109	Gobo 4 Shake, slow to fast
		110 - 117	Gobo 5 Shake, slow to fast
		118 - 125	Gobo 6 Shake, slow to fast
		126 - 133	Gobo 7 Shake, slow to fast

CONTINUED ON NEXT PAGE

# ELIMINATOR STRYKER SPOT - DMX TRAITS

CHANNEL		DMX VALUES	FUNCTION
16Ch	18Ch		
4	6		<b><i>Gobo Wheel 1 (continued)</i></b>
		134 - 147	Gobo 8 Shake, slow to fast
		148 - 199	Clockwise Rotation, fast to slow
		200 - 203	Stop
		204 - 255	Counter-clockwise Rotation, slow to fast
5	7		<b><i>Gobo Wheel 2</i></b>
		000 - 007	Open
		008 - 017	Gobo 1
		018 - 027	Gobo 2
		028 - 037	Gobo 3
		038 - 047	Gobo 4
		048 - 057	Gobo 5
		058 - 067	Gobo 6
		068 - 077	Gobo 1 Shake, slow to fast
		078 - 087	Gobo 2 Shake, slow to fast
		088 - 097	Gobo 3 Shake, slow to fast
		098 - 107	Gobo 4 Shake, slow to fast
		108 - 117	Gobo 5 Shake, slow to fast
		118 - 127	Gobo 6 Shake, slow to fast
		128 - 189	Clockwise Rotation, fast to slow
190 - 193	Stop		
194 - 255	Counter-clockwise Rotation, slow to fast		
6	8		<b><i>Gobo 2 Rotation</i></b>
		000 - 007	Stop
		008 - 129	Clockwise Rotation, fast to slow
		130 - 133	Stop
		134 - 255	Counter-clockwise Rotation, slow to fast
7	9		<b><i>Prism</i></b>
		000 - 007	Open
		008 - 099	Prism 1
		100 - 130	Open
		131 - 255	Prism 2
8	10		<b><i>Prism Rotation</i></b>
		000 - 007	Stop
		008 - 129	Clockwise Rotation, fast to slow
		130 - 133	Stop
		134 - 255	Counter-clockwise Rotation, slow to fast
9	11	000 - 255	<b><i>Focus</i></b> , far to near
10	12	000 - 255	<b><i>Zoom</i></b> , maximum to minimum

CONTINUED ON NEXT PAGE

# ELIMINATOR STRYKER SPOT - DMX TRAITS

CHANNEL		DMX VALUES	FUNCTION
16Ch	18Ch		
11	13		<b>Shutter</b>
		000 - 003	Off
		004 - 127	Strobe, slow to fast
		128 - 191	Pulse Strobe, slow to fast
		192 - 251	Random Strobe, slow to fast
		252 - 255	Open
12	14	000 - 255	<b>Dimmer</b> , 0% to 100%
13	15		<b>Auto Play</b>
		000 - 024	Off
		025 - 046	Auto Play 1
		047 - 068	Auto Play 2
		069 - 090	Auto Play 3
		091 - 112	Auto Play 4
		113 - 134	Auto Play 5
		135 - 156	Auto Play 6
		157 - 178	Auto Play 7
		179 - 200	Auto Play 8
		201 - 255	Color / Gobo Sound Sensitivity
14	16		<b>Internal Programs</b> (refer to <b>Target Mode</b> section of this manual)
		000 - 010	Off
		011 - 020	Program 1
		021 - 030	Program 2
		031 - 040	Program 3
		041 - 050	Program 4
		051 - 060	Program 5
		061 - 070	Program 6
		071 - 080	Program 7
		081 - 090	Program 8
		091 - 229	Sound Active Sensitivity, minimum to maximum
		230 - 255	No Function
15	17	000 - 255	<b>Pan/Tilt Speed</b> , fast to slow
16	18		<b>Reset</b>
		000 - 021	Off
		026 - 076	Reset Effect (hold 3 seconds)
		077 - 128	Reset Pan/Tilt Motor (hold 3 seconds)
		129 - 255	Reset All (hold 3 seconds)