

DMX TRAITS

CHANNEL					DMX VALUES	FUNCTION
1Ch	3Ch	12Ch	14Ch	19Ch		
1	1				0-255	All White , 0~100%
		1	1	1	0-255	White 1 , 0~100%
		2	2	2	0-255	White 2 , 0~100%
		3	3	3	0-255	White 3 , 0~100%
		4	4	4	0-255	White 4 , 0~100%
		5	5	5	0-255	White 5 , 0~100%
		6	6	6	0-255	White 6 , 0~100%
		7	7	7	0-255	White 7 , 0~100%
		8	8	8	0-255	White 8 , 0~100%
		9	9	9	0-255	White 9 , 0~100%
		10	10	10	0-255	White 10 , 0~100%
		11	11	11	0-255	White 11 , 0~100%
		12	12	12	0-255	White 12 , 0~100%
						Shutter, Strobe
					0-31	Led's Off
					32-63	Led's On
					64-95	Strobe effect slow to fast
					96-127	Led's On
					128-159	Pulse-effect in sequences
					160-191	Led's On
					192-223	Random strobe effect slow to fast
					224-255	Led's On
	2		13	13		
					0-255	Dimmer (Intensity) , Intensity 0 to 100%
	3		14	14		
						Auto programs:
					0-10	Off
					11-26	Auto Program 1
					27-43	Auto Program 2
					44-60	Auto Program 3
					61-76	Auto Program 4
					77-93	Auto Program 5
					94-110	Auto Program 6
					111-126	Auto Program 7
					127-143	Auto Program 8
					144-160	Auto Program 9
					161-176	Auto Program 10
					177-193	Auto Program 11
					194-210	Auto Program 12
					211-226	Auto Program 13
					227-255	No Function
				15		
				16	0-255	Auto Programs Speed: Slow to Fast speed
				17	0-255	Auto Programs Fade: 0-100%

DMX TRAITS

CHANNEL					DMX VALUES	FUNCTION
1Ch	3Ch	12Ch	14Ch	19Ch		
				18		Dim Mode
					0-20	Default to Unit Setting
					21-40	Standard
					41-60	Stage
					61-80	TV
					81-100	Architectural
					101-120	Theatre
					121-140	Stage 2
					141-160	Dim Speed from Fast to Slow (0.1-10s)
					161-255	Default to Unit Setting
				19		Dim Curves
					0-20	Square
					21-40	Linear
					41-60	Inv. Squa
					61-80	S. Curve
				81-255	No Function	