

<b>Ultra Hex Bar 6</b>		<b>6 Channel - DMX Values &amp; Functions</b>
<b>Channel</b>	<b>Value</b>	<b>Function</b>
1	0 - 255	RED 0% - 100%
2	0 - 255	GREEN 0% - 100%
3	0 - 255	BLUE 0% - 100%
4	0 - 255	WHITE 0% - 100%
5	0 - 255	AMBER 0% - 100%
6	0 - 255	UV 0% - 100%

<b>Ultra Hex Bar 6</b>		<b>7 Channel - DMX Values &amp; Functions</b>
<b>Channel</b>	<b>Value</b>	<b>Function</b>
1	0 - 255	RED 0% - 100%
2	0 - 255	GREEN 0% - 100%
3	0 - 255	BLUE 0% - 100%
4	0 - 255	WHITE 0% - 100%
5	0 - 255	AMBER 0% - 100%
6	0 - 255	UV 0% - 100%
7	0 - 255	MASTER DIMMER 0% - 100%

Ultra Hex Bar 6		8 Channel - DMX Values & Functions
Channel	Value	Function
1	0 - 255	RED 0% - 100%
2	0 - 255	GREEN 0% - 100%
3	0 - 255	BLUE 0% - 100%
4	0 - 255	WHITE 0% - 100%
5	0 - 255	AMBER 0% - 100%
6	0 - 255	UV 0% - 100%
7	0 - 31 32 - 63 64 - 95 96 - 127 128 - 159 160 - 191 192 - 223 224 - 255	STROBING OFF LED ON STROBING SLOW - FAST LED ON PULSE STROBING SLOW - FAST LED ON RANDOM STROBING LED ON
8	0 - 255	MASTER DIMMER 0% - 100%

**Ultra Hex Bar 6      12 Channel - DMX Values & Functions**

<b>Channel</b>	<b>Value</b>	<b>Function</b>
1	0 - 255	RED 0% - 100%
2	0 - 255	GREEN 0% - 100%
3	0 - 255	BLUE 0% - 100%
4	0 - 255	WHITE 0% - 100%
5	0 - 255	AMBER 0% - 100%
6	0 - 255	UV 0% - 100%
7	0 - 255	COLOR MACROS (See Color Macro Chart on page 19)
8	0 - 31 32 - 63 64 - 95 96 - 127 128 - 159 160 - 191 192 - 223 224 - 255	STROBING OFF LED ON STROBING SLOW - FAST LED ON STROBE PULSE SLOW - FAST LED ON RANDOM STROBING LED ON
9	0 - 255	MASTER DIMMER 0% - 100%
10	0 1 - 24 25 - 35 36 - 46 47 - 57 58 - 68 69 - 79 80 - 90	PROGRAMS OFF PROGRAM 1 PROGRAM 2 PROGRAM 3 PROGRAM 4 PROGRAM 5 PROGRAM 6 PROGRAM 7

Ultra Hex Bar 6		12 Channel - DMX Values & Functions
Channel	Value	Function
10	91 - 101 102 - 112 113 - 123 124 - 134 135 - 145 146 - 156 157 - 167 168 - 178 179 - 189 190 - 200 201 - 211 212 - 222 223 - 233 234 - 255	PROGRAMS PROGRAM 8 PROGRAM 9 PROGRAM 10 PROGRAM 11 PROGRAM 12 PROGRAM 13 PROGRAM 14 PROGRAM 15 PROGRAM 16 PROGRAM 17 PROGRAM 18 PROGRAM 19 PROGRAM 20 SOUND ACTIVE PROGRAMS
11	0 - 255 0 - 255	PROGRAM SPEED/SOUND SENSITIVE SLOW - FAST LEAST SENSITIVE - MOST SENSITIVE
12	0 - 20 21 - 40 41 - 60 61 - 80 81 - 100 101 - 255	DIMMER MODE STANDARD STAGE TV ARCHITECTURAL THEATRE DEFAULT DIMMER SETTING

When Channel 7 is being used, Channels 1-6 will not work.

When Channel 10 is between the values of 1-233, Channel 11 will control the program speed.

When Channel 10 is between the values of 234-255, Channel 11 will control the sound sensitivity.

**Ultra Hex Bar 6****18 Channel - DMX Values & Functions**

<b>Channel</b>	<b>Value</b>	<b>Function</b>
1	0 - 255	RED 0% - 100% PIXEL 1 & 2
2	0 - 255	GREEN 0% - 100% PIXEL 1 & 2
3	0 - 255	BLUE 0% - 100% PIXEL 1 & 2
4	0 - 255	WHITE 0% - 100% PIXEL 1 & 2
5	0 - 255	AMBER 0% - 100% PIXEL 1 & 2
6	0 - 255	UV 0% - 100% PIXEL 1 & 2
7	0 - 255	RED 0% - 100% PIXEL 3 & 4
8	0 - 255	GREEN 0% - 100% PIXEL 3 & 4
9	0 - 255	BLUE 0% - 100% PIXEL 3 & 4
10	0 - 255	WHITE 0% - 100% PIXEL 3 & 4
11	0 - 255	AMBER 0% - 100% PIXEL 3 & 4
12	0 - 255	UV 0% - 100% PIXEL 3 & 4
13	0 - 255	RED 0% - 100% PIXEL 5 & 6
14	0 - 255	GREEN 0% - 100% PIXEL 5 & 6
15	0 - 255	BLUE 0% - 100% PIXEL 5 & 6
16	0 - 255	WHITE 0% - 100% PIXEL 5 & 6
17	0 - 255	AMBER 0% - 100% PIXEL 5 & 6
18	0 - 255	UV 0% - 100% PIXEL 5 & 6