

Entour Venue		1 Channel Mode
Channel	Value	Function
1	0 - 4 5 - 255	OUTPUT VOLUME & FAN SPEED 0% OUTPUT VOLUME 5% FAN SPEED 5%-100% OUTPUT VOLUME 100% FAN SPEED

Entour Venue		2 Channel Mode
Channel	Value	Function
1	0 - 4 5 - 255	OUTPUT VOLUME 0% OUTPUT VOLUME 5%-100% OUTPUT VOLUME
2	0 - 15 16 - 255	FAN SPEED 5% FAN SPEED 6%-100% FAN SPEED

Note: In 2 channel mode, when using channel 1 only, the default fan speed is 30%.

Entour Venue		4 Channel Mode
Channel	Value	Function
1	0 - 4 5 - 255	OUTPUT VOLUME 0% OUTPUT VOLUME 5%-100% OUTPUT VOLUME
2	0 - 15 16 - 255	FAN SPEED 5% FAN SPEED 6%-100% FAN SPEED
3	0 - 7 8 - 255	DURATION 3 SECONDS 3-250 SECONDS
4	0 - 9 10 - 255	INTERVAL 0 SECONDS 5-250 SECONDS

Note: In 4 channel mode, when using channel 1 only, the default fan speed is 30%.