

1 CHANNEL MODE		
Channel	Value	Function
1	0 - 255	WARM WHITE 0% - 100%

2 CHANNEL MODE		
Channel	Value	Function
1	0 - 255	WARM WHITE 0% - 100%
2	0 - 31 32 - 63 64 - 95 96 - 127 128 - 159 160 - 191 192 - 223 224 - 255	SHUTTER/STROBE LED OFF LED ON STROBING SLOW - FAST LED ON PULSE STROBE SLOW - FAST LED ON RANDOM STROBE SLOW - FAST LED ON

4 CHANNEL MODE		
Channel	Value	Function
1	0 - 255	WARM WHITE 0% - 100%
2	0 - 255	WARM WHITE FINE 0% - 100%
3	0 - 31 32 - 63 64 - 95 96 - 127 128 - 159 160 - 191 192 - 223 224 - 255	SHUTTER/STROBE LED OFF LED ON STROBING SLOW - FAST LED ON PULSE STROBE SLOW - FAST LED ON RANDOM STROBE SLOW - FAST LED ON
4	0 - 20 21 - 40 41 - 60 61 - 80 81 - 100 101 - 255	DIMMER CURVES STANDARD STAGE TV ARCHITECTURAL THEATRE DEFAULT DIMMER SETTING