

<b>Saber Spot RGBW</b>		<b>3 Channel Mode</b>
<b>Channel</b>	<b>Value</b>	<b>Function</b>
1	0 - 255	HUE 0% - 100%
2	0 - 255	SATURATION 0% - 100%
3	0 - 255	INTENSITY 0% - 100%

<b>Saber Spot RGBW</b>		<b>4 Channel Mode</b>
<b>Channel</b>	<b>Value</b>	<b>Function</b>
1	0 - 255	RED 0% - 100%
2	0 - 255	GREEN 0% - 100%
3	0 - 255	BLUE 0% - 100%
4	0 - 255	WHITE 0% - 100%

<b>Saber Spot RGBW</b>		<b>4 Channel Mode</b>
<b>Channel</b>	<b>Value</b>	<b>Function</b>
1	0 - 255	HUE 0% - 100%
2	0 - 255	SATURATION 0% - 100%
3	0 - 255	INTENSITY 0% - 100%
4	0 - 20 21 - 40 41 - 60 61 - 80 81 - 100 101 - 255	DIMMER CURVES STANDARD STAGE TV ARCHITECTURAL THEATRE DEFAULT DIMMER SETTING

<b>Saber Spot RGBW</b>		<b>5 Channel Mode</b>
<b>Channel</b>	<b>Value</b>	<b>Function</b>
1	0 - 255	RED 0% - 100%
2	0 - 255	GREEN 0% - 100%
3	0 - 255	BLUE 0% - 100%
4	0 - 255	WHITE 0% - 100%
5	0 - 255	MASTER DIMMER 0% - 100%

<b>Saber Spot RGBW</b>		<b>6 Channel Mode</b>
<b>Channel</b>	<b>Value</b>	<b>Function</b>
1	0 - 31 32 - 63 64 - 95 96 - 127 128 - 159 160 - 191 192 - 223 224 - 255	SHUTTER/STROBE LED OFF LED ON STROBING SLOW - FAST LED ON PULSE STROBE SLOW - FAST LED ON RANDOM STROBE SLOW - FAST LED ON
2	0 - 255	RED 0% - 100%
3	0 - 255	GREEN 0% - 100%
4	0 - 255	BLUE 0% - 100%
5	0 - 255	WHITE 0% - 100%
6	0 - 255	INTENSITY 0% - 100%

<b>Saber Spot RGBW</b>		<b>6 Channel Mode</b>
<b>Channel</b>	<b>Value</b>	<b>Function</b>
1	0 - 255	RED 0% - 100%
2	0 - 255	GREEN 0% - 100%
3	0 - 255	BLUE 0% - 100%
4	0 - 255	WHITE 0% - 100%
5	0 - 255	MASTER DIMMER 0% - 100%
6	0 - 255	DIMMER FINE 0% - 100%

<b>Saber Spot RGBW</b>		<b>7 Channel Mode</b>
<b>Channel</b>	<b>Value</b>	<b>Function</b>
1	0 - 255	RED 0% - 100%
2	0 - 255	GREEN 0% - 100%
3	0 - 255	BLUE 0% - 100%
4	0 - 255	WHITE 0% - 100%
5	0 - 31 32 - 63 64 - 95 96 - 127 128 - 159 160 - 191 192 - 223 224 - 255	SHUTTER/STROBE LED OFF LED ON STROBING SLOW - FAST LED ON PULSE STROBE SLOW - FAST LED ON RANDOM STROBE SLOW - FAST LED ON
6	0 - 255	MASTER DIMMER 0% - 100%
7	0 - 255	DIMMER FINE 0% - 100%

<b>Saber Spot RGBW</b>		<b>8 Channel Mode</b>
<b>Channel</b>	<b>Value</b>	<b>Function</b>
1	0 - 255	RED 0% - 100%
2	0 - 255	GREEN 0% - 100%
3	0 - 255	BLUE 0% - 100%
4	0 - 255	WHITE 0% - 100%
5	0 - 31 32 - 63 64 - 95 96 - 127 128 - 159 160 - 191 192 - 223 224 - 255	SHUTTER/STROBE LED OFF LED ON STROBING SLOW - FAST LED ON PULSE STROBE SLOW - FAST LED ON RANDOM STROBE SLOW - FAST LED ON
6	0 - 255	MASTER DIMMER 0% - 100%
7	0 - 255	DIMMER FINE 0% - 100%
8	0 - 20 21 - 40 41 - 60 61 - 80 81 - 100 101 - 255	DIMMER CURVES STANDARD STAGE TV ARCHITECTURAL THEATRE DEFAULT DIMMER SETTING

**Saber Spot RGBW** **8 Channel Mode**

<b>Channel</b>	<b>Value</b>	<b>Function</b>
1	0 - 255	RED 0% - 100%
2	0 - 255	RED FINE 0% - 100%
3	0 - 255	GREEN 0% - 100%
4	0 - 255	GREEN FINE 0% - 100%
5	0 - 255	BLUE 0% - 100%
6	0 - 255	BLUE FINE 0% - 100%
7	0 - 255	WHITE 0% - 100%
8	0 - 255	WHITE FINE 0% - 100%

<b>Saber Spot RGBW</b>		<b>9 Channel Mode</b>
<b>Channel</b>	<b>Value</b>	<b>Function</b>
1	0 - 31 32 - 63 64 - 95 96 - 127 128 - 159 160 - 191 192 - 223 224 - 255	SHUTTER/STROBE LED OFF LED ON STROBING SLOW - FAST LED ON PULSE STROBE SLOW - FAST LED ON RANDOM STROBE SLOW - FAST LED ON
2	0 - 255	HUE 0% - 100%
3	0 - 255	SATURATION 0% - 100%
4	0 - 255	INTENSITY 0% - 100%
5	0 - 255	COLOR MACROS SEE PAGES 30-31 FOR CHART
6	0 1 - 20 21 - 40 41 - 60 61 - 80 81 - 100 101 - 120 121 - 140 141 - 160 161 - 180 181 - 200 201 - 220 221 - 240 241 - 250 251 - 255	AUTO PROGRAMS OFF PROGRAM 1 PROGRAM 2 PROGRAM 3 PROGRAM 4 PROGRAM 5 PROGRAM 6 PROGRAM 7 PROGRAM 8 PROGRAM 9 PROGRAM 10 PROGRAM 11 PROGRAM 12 PROGRAM 13 GRADIENT EFFECT

**Saber Spot RGBW****9 Channel Mode**

<b>Channel</b>	<b>Value</b>	<b>Function</b>
7	0 - 255	PROGRAM SPEED SLOW - FAST
8	0 - 255	PROGRAM FADE FAST - SLOW
9	0 - 20 21 - 40 41 - 60 61 - 80 81 - 100 101 - 255	DIMMER CURVES STANDARD STAGE TV ARCHITECTURAL THEATRE DEFAULT DIMMER SETTING



<b>Channel</b>	<b>Value</b>	<b>Function</b>
1	0 - 31 32 - 63 64 - 95 96 - 127 128 - 159 160 - 191 192 - 223 224 - 255	SHUTTER/STROBE LED OFF LED ON STROBING SLOW - FAST LED ON PULSE STROBE SLOW - FAST LED ON RANDOM STROBE SLOW - FAST LED ON
2	0 - 255	RED 0% - 100%
3	0 - 255	GREEN 0% - 100%
4	0 - 255	BLUE 0% - 100%
5	0 - 255	WHITE 0% - 100%
6	0 - 255	INTENSITY 0% - 100%
7	0 - 255	COLOR MACROS SEE PAGES 30-31 FOR CHART
8	0 1 - 20 21 - 40 41 - 60 61 - 80 81 - 100 101 - 120 121 - 140 141 - 160 161 - 180 181 - 200 201 - 220	AUTO PROGRAMS OFF PROGRAM 1 PROGRAM 2 PROGRAM 3 PROGRAM 4 PROGRAM 5 PROGRAM 6 PROGRAM 7 PROGRAM 8 PROGRAM 9 PROGRAM 10 PROGRAM 11

**Saber Spot RGBW****11 Channel Mode**

<b>Channel</b>	<b>Value</b>	<b>Function</b>
8	221 - 240 241 - 250 251 - 255	AUTO PROGRAMS PROGRAM 12 PROGRAM 13 GRADIENT EFFECT
9	0 - 255	PROGRAM SPEED SLOW - FAST
10	0 - 255	PROGRAM FADE FAST - SLOW
11	0 - 20 21 - 40 41 - 60 61 - 80 81 - 100 101 - 255	DIMMER CURVES STANDARD STAGE TV ARCHITECTURAL THEATRE DEFAULT DIMMER SETTING

<b>Saber Spot RGBW</b>		<b>12 Channel Mode</b>
<b>Channel</b>	<b>Value</b>	<b>Function</b>
1	0 - 255	RED 0% - 100%
2	0 - 255	GREEN 0% - 100%
3	0 - 255	BLUE 0% - 100%
4	0 - 255	WHITE 0% - 100%
5	0 - 255	COLOR MACROS SEE PAGES 30-31 FOR CHART
6	0 - 31 32 - 63 64 - 95 96 - 127 128 - 159 160 - 191 192 - 223 224 - 255	SHUTTER/STROBE LED OFF LED ON STROBING SLOW - FAST LED ON PULSE STROBE SLOW - FAST LED ON RANDOM STROBE SLOW - FAST LED ON
7	0 - 255	MASTER DIMMER 0% - 100%
8	0 - 255	DIMMER FINE 0% - 100%
9	0 1 - 20 21 - 40 41 - 60 61 - 80 81 - 100 101 - 120 121 - 140 141 - 160 161 - 180	AUTO PROGRAMS OFF PROGRAM 1 PROGRAM 2 PROGRAM 3 PROGRAM 4 PROGRAM 5 PROGRAM 6 PROGRAM 7 PROGRAM 8 PROGRAM 9

<b>Channel</b>	<b>Value</b>	<b>Function</b>
9	181 - 200	AUTO PROGRAMS
	201 - 220	PROGRAM 10
	221 - 240	PROGRAM 11
	241 - 250	PROGRAM 12
	251 - 255	PROGRAM 13
		GRADIENT EFFECT
10	0 - 255	PROGRAM SPEED SLOW - FAST
11	0 - 255	PROGRAM FADE FAST - SLOW
12	0 - 20	DIMMER CURVES
	21 - 40	STANDARD
	41 - 60	STAGE
	61 - 80	TV
	81 - 100	ARCHITECTURAL
	101 - 255	THEATRE DEFAULT DIMMER SETTING