



**Vizi Hybrid 16RX****DMX Mode Values & Traits**

<b>Channel</b>	<b>Value</b>	<b>Function</b>
1	0 - 255	PAN MOVEMENT
2	0 - 255	PAN FINE
3	0 - 255	TILT MOVEMENT
4	0 - 255	TILT FINE
5	0 - 2	COLOR WHEEL WHITE
	3 - 4	WHITE & RED
	5 - 6	RED
	7 - 8	RED & BLUE
	9 - 10	BLUE
	11 - 12	BLUE & GREEN
	13 - 14	GREEN
	15 - 16	GREEN & YELLOW
	17 - 18	YELLOW
	19 - 21	YELLOW & ORANGE
	22 - 23	ORANGE
	24 - 25	ORANGE & MAGENTA
	26 - 27	MAGENTA
	28 - 29	MAGENTA & LIGHT BLUE
	30 - 31	LIGHT BLUE
	32 - 33	LIGHT BLUE & LIGHT YELLOW
	34 - 35	LIGHT YELLOW
	36 - 37	COLOR 8 & LIGHT GREEN
	38 - 39	LIGHT GREEN
	40 - 42	LIGHT GREEN & PURPLE
	43 - 44	PURPLE
	45 - 46	PURPLE & PINK
	47 - 48	PINK
	49 - 50	PINK & MEDIUM YELLOW
	51 - 52	MEDIUM YELLOW
	53 - 54	MEDIUM YELLOW & CTB
	55 - 56	CTB
	57 - 58	CTB & UV
	59 - 60	UV
	61 - 63	UV & WHITE
	64 - 127	COLOR INDEXING
	128 - 189	CLOCKWISE ROTATION FAST - SLOW
	190 - 193	NO ROTATION
	194 - 255	COUNTER-CLOCKWISE ROTATION SLOW - FAST

Channel	Value	Function
6	0 - 3	GOBO WHEEL 1 OPEN
	4 - 6	GOBO 1
	7 - 9	GOBO 2
	10 - 12	GOBO 3
	13 - 15	GOBO 4
	16 - 18	GOBO 5
	19 - 21	GOBO 6
	22 - 24	GOBO 7
	25 - 27	GOBO 8
	28 - 30	GOBO 9
	31 - 33	GOBO 10
	34 - 36	GOBO 11
	37 - 39	GOBO 12
	40 - 42	GOBO 13
	43 - 45	GOBO 14
	46 - 48	GOBO 15
	49 - 55	GOBO 16
	56 - 127	GOBO SHAKE GOBOS 1-16
	128 - 189	COUNTER-CLOCKWISE ROTATION FAST - SLOW
	190 - 193	NO ROTATION
194 - 255	CLOCKWISE ROTATION SLOW - FAST	

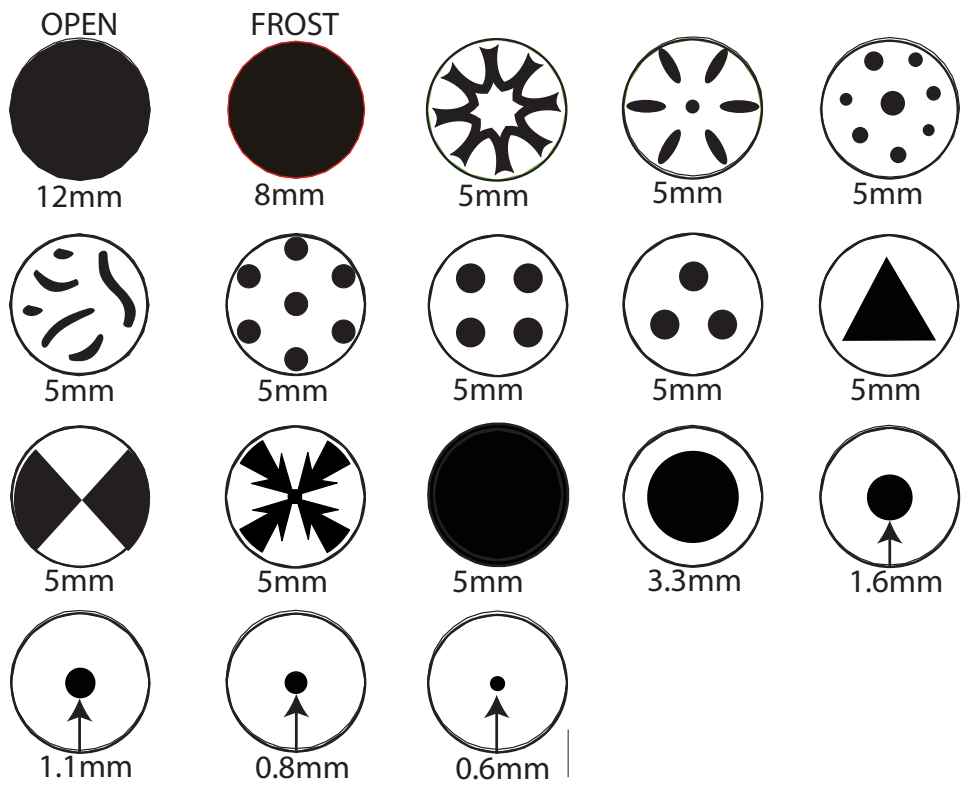

Channel	Value	Function
7		GOBO WHEEL 2 (GLASS GOBO'S)
	0 - 5	OPEN
	6 - 10	GOBO 1
	11 - 15	GOBO 2
	16 - 20	GOBO 3
	21 - 25	GOBO 4
	26 - 30	GOBO 5
	31 - 36	GOBO 6
	37 - 41	GOBO 7
	42 - 46	GOBO 8
	47 - 51	GOBO 9
	52 - 56	GOBO 10
	57 - 61	GOBO 11
	62 - 67	GOBO 12
	68 - 127	GOBO SHAKE GOBOS 1-12
128 - 189	COUNTER-CLOCKWISE ROTATION FAST - SLOW	
190 - 193	NO ROTATION	
194 - 255	CLOCKWISE ROTATION SLOW - FAST	

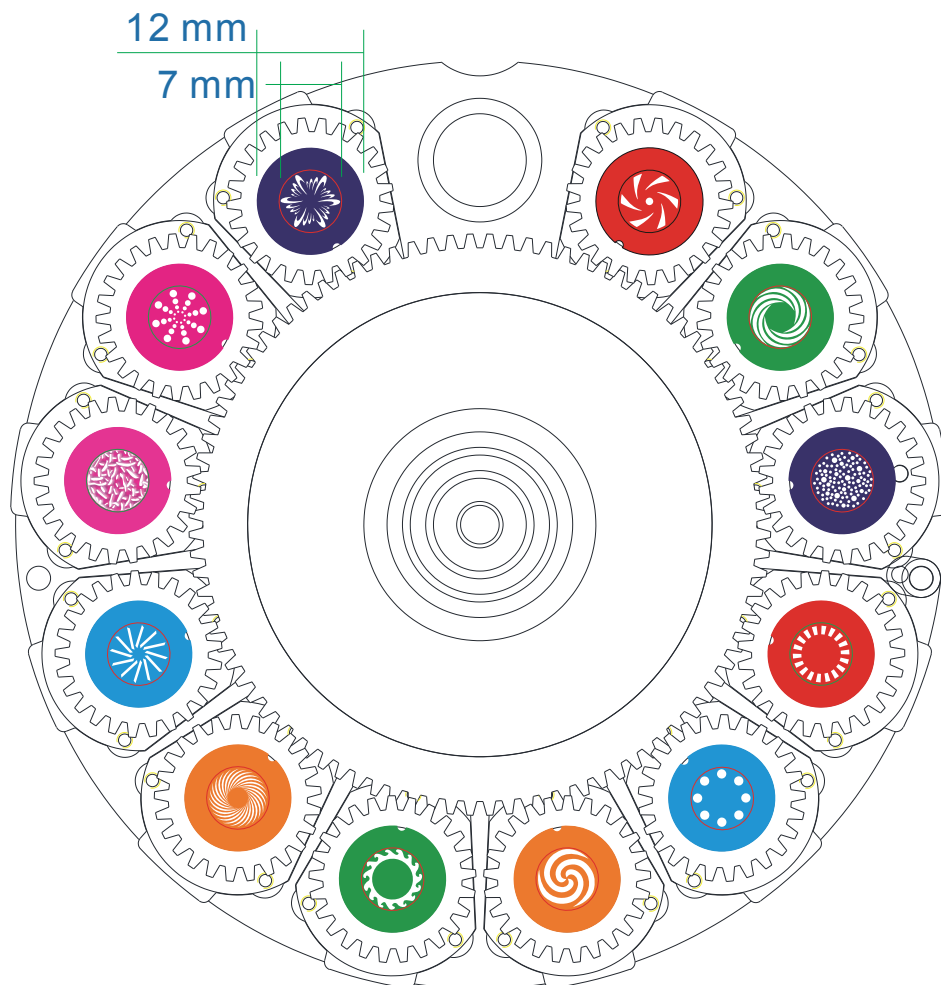

**Vizi Hybrid 16RX****DMX Mode Values & Traits**

<b>Channel</b>	<b>Value</b>	<b>Function</b>
8	0 - 127 128 - 189 190 - 193 194 - 255	GOBO WHEEL 2 GOBO ROTATION INDEXING CLOCKWISE ROTATION FAST - SLOW NO ROTATION COUNTER-CLOCKWISE ROTATION SLOW - FAST
9	0 - 7 8 - 255	PRISM 1 (8 FACET) NO PRISM EFFECT PRISM ACTIVE
10	0 - 127 128 - 189 190 - 193 194 - 255	PRISM 1 ROTATION INDEXING COUNTER-CLOCKWISE ROTATION FAST - SLOW NO ROTATION CLOCKWISE ROTATION SLOW - FAST
11	0 - 7 8 - 255	PRISM 2 (6 FACET) NO PRISM EFFECT PRISM ACTIVE
12	0 - 127 128 - 189 190 - 193 194 - 255	PRISM 2 ROTATION INDEXING COUNTER-CLOCKWISE ROTATION FAST - SLOW NO ROTATION CLOCKWISE ROTATION SLOW - FAST
13	0 - 7 8 - 15 16 - 131 132 - 167 168 - 203 204 - 239 240 - 247 248 - 255	SHUTTER & STROBE SHUTTER CLOSED SHUTTER OPEN STROBING SLOW - FAST SLOW OPEN - FAST CLOSE FAST OPEN - SLOW CLOSE SLOW OPEN - SLOW CLOSE RANDOM STROBE OPEN
14	0 - 255	MASTER DIMMER 0% - 100%
15	0 - 255	FOCUS NEAR - FAR
16	0 - 255	ZOOM 3° - 32°
17	0 - 7 8 - 255	FROST NO FUNCTION 0% - 100%

<b>Channel</b>	<b>Value</b>	<b>Function</b>
18	0 - 255	PAN/TILT SPEED FAST - SLOW
19	0 - 49	SPECIAL FUNCTIONS NO FUNCTION
	50 - 59	ENABLE FROST WITH COLOR CHANGE
	60 - 69	DISABLE FROST WITH COLOR CHANGE
	70 - 79	ENABLE BLACKOUT WITH PAN/TILT MOVEMENT
	80 - 89	DISABLE BLACKOUT WITH PAN/TILT MOVEMENT
	90 - 99	ENABLE BLACKOUT WITH COLOR CHANGE
	100 - 109	DISABLE BLACKOUT WITH COLOR CHANGE
	110 - 119	ENABLE BLACKOUT WITH GOBO CHANGE
	120 - 129	DISABLE BLACKOUT WITH GOBO CHANGE
	130 - 139	LAMP ON
	140 - 149	PAN/TILT RESET
	150 - 159	EFFECT RESET
	160 - 169	FAN SPEED QUIET
	170 - 179	FAN SPEED FAST
	180 - 189	LAMP FULL POWER
	190 - 199	LAMP HALF POWER
	200 - 209	RESET ALL
	210 - 229	NO FUNCTION
	230 - 239	LAMP OFF
	240 - 255	NO FUNCTION