

PIXIE DRIVER 8000

User Manual

©2022 ADJ Products, LLC all rights reserved. Information, specifications, diagrams, images, and instructions herein are subject to change without notice. ADJ Products, LLC logo and identifying product names and numbers herein are trademarks of ADJ Products, LLC. Copyright protection claimed includes all forms and matters of copyrightable materials and information now allowed by statutory or judicial law or hereinafter granted. Product names used in this document may be trademarks or registered trademarks of their respective companies and are hereby acknowledged. All non-ADJ Products, LLC brands and product names are trademarks or registered trademarks of their respective companies.

ADJ Products, LLC and all affiliated companies hereby disclaim any and all liabilities for property, equipment, building, and electrical damages, injuries to any persons, and direct or indirect economic loss associated with the use or reliance of any information contained within this document, and/or as a result of the improper, unsafe, insufficient and negligent assembly, installation, rigging, and operation of this product.

ADJ PRODUCTS LLC World Headquarters

6122 S. Eastern Ave. | Los Angeles, CA 90040 USA

Tel: 800-322-6337 | Fax: 323-582-2941 | www.adj.com | support@adj.com

ADJ Supply Europe B.V.

Junostraat 2 | 6468 EW Kerkrade | Netherlands

Tel: +31 45 546 85 00 | Fax: +31 45 546 85 99 | www.americandj.eu | service@americandj.eu

Europe Energy Saving Notice

Energy Saving Matters (EuP 2009/125/EC)

Saving electric energy is a key to help protecting the environment. Please turn off all electrical products when they are not in use. To avoid power consumption in idle mode, disconnect all electrical equipment from power when not in use. Thank you!

DOCUMENT VERSION



Due to additional product features and/or enhancements, an updated version of this document may be available online.

Please check www.adj.com for the latest revision/update of this manual before beginning installation and/or programming.

Date	Document Version	Software Version	Notes
07/25/22	1.0	1.00	Initial Release
11/09/22	1.5	N/C	Update Dimensions

CONTENTS

General Information	4
Limited Warranty (USA Only)	5
Warranty Registration Features	6
Safety Guidelines	7
Overview	8
Installation	9
Driver Output Limitations	13
RGB Pixel Control	15
Control Panel	19
System Menu	20
Maintenance Guidelines	25
Specifications	26
Dimensions	27
Accessories	28

GENERAL INFORMATION

INTRODUCTION

Please read and understand the instructions in this manual carefully and thoroughly before attempting to operate this device. These instructions contain important safety and use information. **This product is intended for use by professionally trained personnel only, and is not suitable for private use.**

UNPACKING

Every device has been thoroughly tested and has been shipped in perfect operating condition. Carefully check the shipping carton for damage that may have occurred during shipping. If the carton is damaged, carefully inspect the device for damage, and be sure all accessories necessary to install and operate the device have arrived intact. In the event that damage has been found or parts are missing, please contact our customer support team for further instructions. Please do not return this device to your dealer without first contacting customer support. Please do not discard the shipping carton in the trash. Please recycle whenever possible.

BOX CONTENTS

Power Cable (x1)
3-meter 4-pin Data Cable (x1)

CUSTOMER SUPPORT

Contact ADJ Service for any product related service and support needs. Also visit forums.adj.com with questions, comments, or suggestions.

ADJ SERVICE USA - Monday - Friday 8:00am to 4:30pm PST
323-582-2650 | Fax: 323-832-2941 | support@adj.com

ADJ SERVICE EUROPE - Monday - Friday 08:30 to 17:00 CET
+31 45 546 85 60 | Fax: +31 45 546 85 96 | support@adj.eu

REPLACEMENT PARTS please visit parts.adj.com



IMPORTANT NOTICE!

THERE ARE NO USER SERVICEABLE PARTS INSIDE THIS UNIT. DO NOT ATTEMPT ANY REPAIRS YOURSELF, AS DOING SO WILL VOID YOUR MANUFACTURER'S WARRANTY. DAMAGES RESULTING FROM MODIFICATIONS TO THIS FIXTURE AND/OR THE DISREGARD OF SAFETY INSTRUCTIONS AND GUIDELINES IN THIS MANUAL VOID THE MANUFACTURER'S WARRANTY AND ARE NOT SUBJECT TO WARRANTY CLAIMS AND/OR REPAIRS.

LIMITED WARRANTY (USA ONLY)

- A. ADJ Products, LLC hereby warrants, to the original purchaser, ADJ Products, LLC products to be free of manufacturing defects in material and workmanship for a prescribed period from the date of purchase (see specific warranty period on reverse). This warranty shall be valid only if the product is purchased within the United States of America, including possessions and territories. It is the owner's responsibility to establish the date and place of purchase by acceptable evidence, at the time service is sought.
- B. For warranty service, you must obtain a Return Authorization number (RA#) before sending back the product-please contact ADJ Products, LLC Service Department at 800-322-6337. Send the product only to the ADJ Products, LLC factory. All shipping charges must be pre-paid. If the requested repairs or service (including parts replacement) are within the terms of this warranty, ADJ Products, LLC will pay return shipping charges only to a designated point within the United States. If the entire instrument is sent, it must be shipped in its original package. No accessories should be shipped with the product. If any accessories are shipped with the product, ADJ Products, LLC shall have no liability whatsoever for loss of or damage to any such accessories, or for the safe return thereof.
- C. This warranty is void if the serial number has been altered or removed; if the product is modified in any manner which ADJ Products, LLC concludes, after inspection, affects the reliability of the product, if the product has been repaired or service by anyone other than ADJ Products, LLC factory unless prior written authorization was issued to purchaser by ADJ Products, LLC; if the product is damaged because not properly maintained as set forth in the instruction manual.
- D. This is not a service contract, and this warranty does not include maintenance, cleaning or periodic check up. During the period specified above, ADJ Products, LLC will replace defective parts at its expense with new or refurbished parts, and will absorb all expenses for warrant service and repair labor by reason of defects in material or workmanship. The sole responsibility of ADJ Products, LLC under this warranty shall be limited to the repair of the product, or replacement thereof, including parts, at the sole discretion of ADJ Products, LLC. All products covered by this warranty were manufactured after August 15, 2012, and bear identifying marks to that effect.
- E. ADJ Products, LLC reserves the right to make changes in design and/or improvements upon its products without any obligation to include these changes in any products theretofore manufactured.
- F. No warranty, whether expressed or implied, is given or made with respect to any accessory supplied with products described above. Except to the extent prohibited by applicable law, all implied warranties made by ADJ Products, LLC in connection with this product, including warranties of merchantability or fitness, are limited in duration to the warranty period set forth above. And no warranties, whether expressed or implied, including warranties of merchantability or fitness, shall apply to this product after said period has expired. The consumer's and/or Dealer's sole remedy shall be such repair or replacement as is expressly provided above; and under no circumstances shall ADJ Products, LLC be liable for any loss or damage, direct or consequential, arising out of the use of, or inability to use, this product.
- G. This warranty is the only written warranty applicable to ADJ Products, LLC Products and supersedes all prior warranties and written descriptions of warranty terms and conditions heretofore published.

LIMITED WARRANTY PERIODS

- **Non L.E.D. Lighting Products = 1-year (365 days) Limited Warranty** (Such as: Special Effect Lighting, Intelligent Lighting, UV lighting, Strobes, Fog Machines, Bubble Machines, Mirror Balls, Par Cans, Trussing, Lighting Stands etc. excluding LED and lamps)
- **Laser Products = 1 Year (365 Days) Limited Warranty** (excludes laser diodes which have 6 month limited warranty)
- **L.E.D. Products = 2-year (730 days) Limited Warranty** (excluding batteries which have a 180 day limited warranty)
Note: 2 Year Warranty only applies to purchases within the United States.
- **StarTec Series = 1 Year Limited Warranty** (excluding batteries which have a 180 day limited warranty)
- **ADJ DMX Controllers = 2 Year (730 Days) Limited Warranty**

WARRANTY REGISTRATION

The Pixie Driver 8000 carries a 2 year limited warranty. Please fill out the enclosed warranty card to validate your purchase. All returned service items, whether under warranty or not, must be freight pre-paid and accompanied by a return authorization (R.A.) number. The R.A. number must be clearly written on the outside of the return package. A brief description of the problem as well as the R.A. number must also be written down on a piece of paper included in the shipping carton. If the unit is under warranty, you must provide a copy of your proof of purchase invoice. You may obtain an R.A. number by contacting our customer support team. All packages returned to the service department not displaying an R.A. number on the outside of the package will be returned to the shipper.

FEATURES

- Power / data supply for ADJ Pixie Strip 30, Pixie Strip 60, and Pixie Strip 120
- Manual RGB mode
- Internal programs
- Manual Dimming and Strobe Control
- Full Pixel Mapping Control
- Drives up to 8,160 Pixels via KlingNet (1,020 Pixels per port)
- Drives up to 1,360 Pixels via Art-Net and sACN (170 Pixels per port)
- OLED screen with 4-button menu
- USB port for Firmware Updates

SAFETY GUIDELINES



For your own personal safety, please read and understand this manual completely before attempting to install or operate this device!

- Be sure to save the packing carton in the unlikely event that the device needs to be returned for service.
- Do not spill water or other liquids into or on to the device.
- Be sure that the voltage of the power source matches the required voltage for the device.
- Do not open up the device for any reason. There are no user serviceable parts inside.
- Disconnect the device's main power when left unused for long periods of time.
- Never connect this device to a dimmer pack.
- Do not attempt to operate this device if it has been damaged in any way.
- Never operate this device with the cover removed.
- To reduce the risk of electrical shock or fire, do not expose this device to rain or moisture.
- Do not attempt to operate this device if the power cord has been frayed or broken.
- Do not attempt to remove or break off the ground prong from the electrical cord. This prong is used to reduce the risk of electrical shock and fire in the event of an internal short.
- Disconnect from main power before making any type of connection.
- Never block the ventilation holes. Always be sure to mount this device in an area that will allow proper ventilation. Allow about 6" (15cm) between this device and a wall.
- This unit is intended for indoor use only. Use of this product outdoors voids all warranties.
- Always mount this unit in a safe and stable matter.
- Please route your power cord out of the way of foot traffic. Power cords should be routed so they are not likely to be walked on, or pinched by items placed upon or against them.
- The device should be serviced by qualified service personnel when:
 - A. The power-supply cord or the plug has been damaged.
 - B. Objects have fallen on, or liquid has been spilled into, the device.
 - C. The device has been exposed to rain or water.
 - D. The appliance does not appear to operate normally or exhibits a marked change in performance.

Ambient operating temperature ranges is from -4°F to 113°F (-20°C to 45°C). Do not operate this device when ambient temperature falls outside of this range!

KEEP FLAMMABLE MATERIALS AWAY FROM THIS FIXTURE!

OVERVIEW

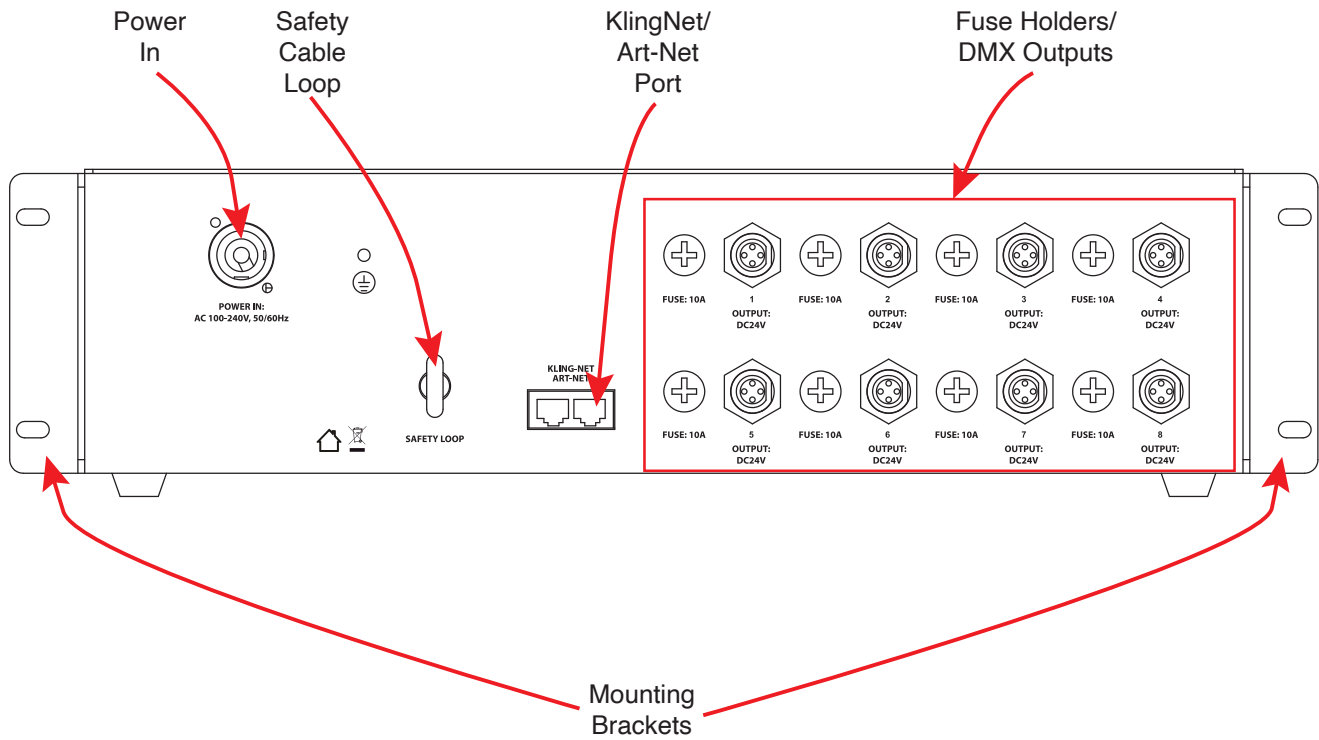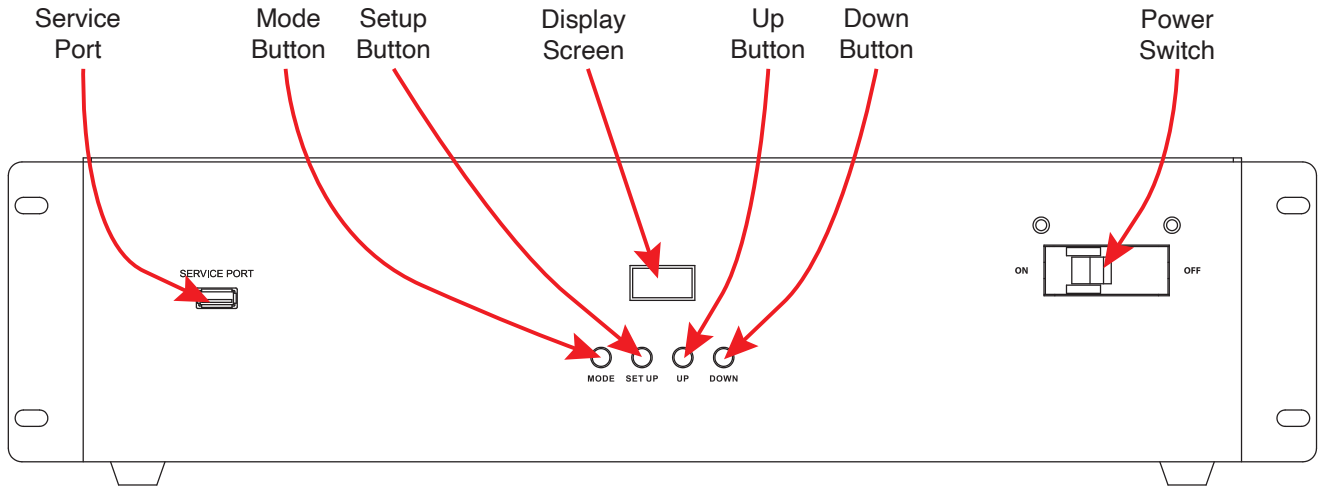

INSTALLATION

FLAMMABLE MATERIAL WARNING!

Keep drive a minimum of 5.0 feet (1.5m) away from flammable material and/or pyrotechnics.

ELECTRICAL CONNECTIONS

A qualified electrician should be used for all electrical connections and/or installations.

DO NOT INSTALL THE DEVICE IF YOU ARE NOT QUALIFIED TO DO SO!

The driver **MUST** be installed following all local, national, and country commercial electrical and construction codes and regulations.

Before installing or mounting any device, a professional equipment installer **MUST** be consulted to determine whether the mounting structure or surface is properly certified to safely support the combined weight of the device and any relevant accessories.


Ambient operating temperature range is from **-4°F to 113°F (-20°C to 45°C)**. Do not operate this device when ambient temperature falls outside this range.

The device should be installed away from walking paths, seating areas, or areas where unauthorized personnel might be able to reach the device by hand.

INSTALLATION

CLAMP MOUNTING

This fixture features a mounting point in the middle of the top side for the installation of a mounting clamp. Additionally, the unit also features a safety cable loop on side face, near the Klingnet/Artnet Port (see the illustration below). When mounting the fixture to a truss or any other suspended or overhead installation, be sure to secure an appropriately rated mounting clamp (not included) to the device. Attach a separate **SAFETY CABLE** of the appropriate weight rating to the provided safety cable loop.

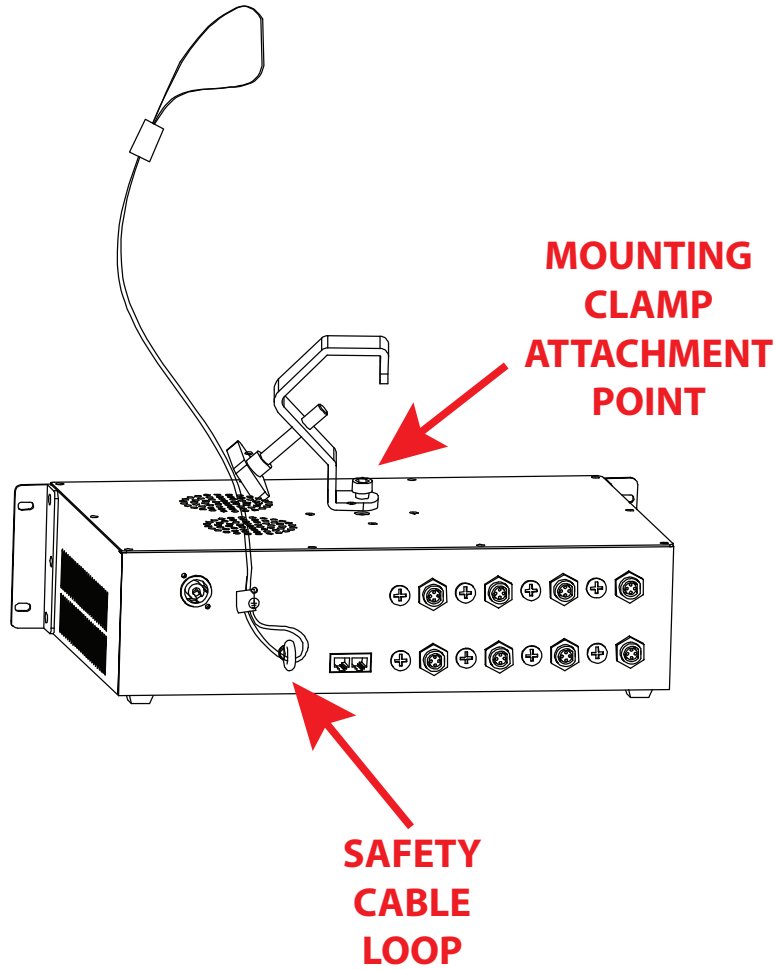

SAFETY CABLE:


ALWAYS ATTACH A SAFETY CABLE WHENEVER INSTALLING THIS FIXTURE IN A SUSPENDED ENVIRONMENT TO ENSURE THAT THE FIXTURE WILL NOT FALL IF THE CLAMP FAILS.



INSTALLATION

RACK MOUNTING


This device can be mounted in a standard 19-inch rack using the mounting brackets located on each side of the device. Make sure to use mounting hardware that fits the mounting holes on the device as well as the rack itself. Use all four (4) points on the mounting brackets to ensure that the device is mounted securely. Please see the illustration below for reference.

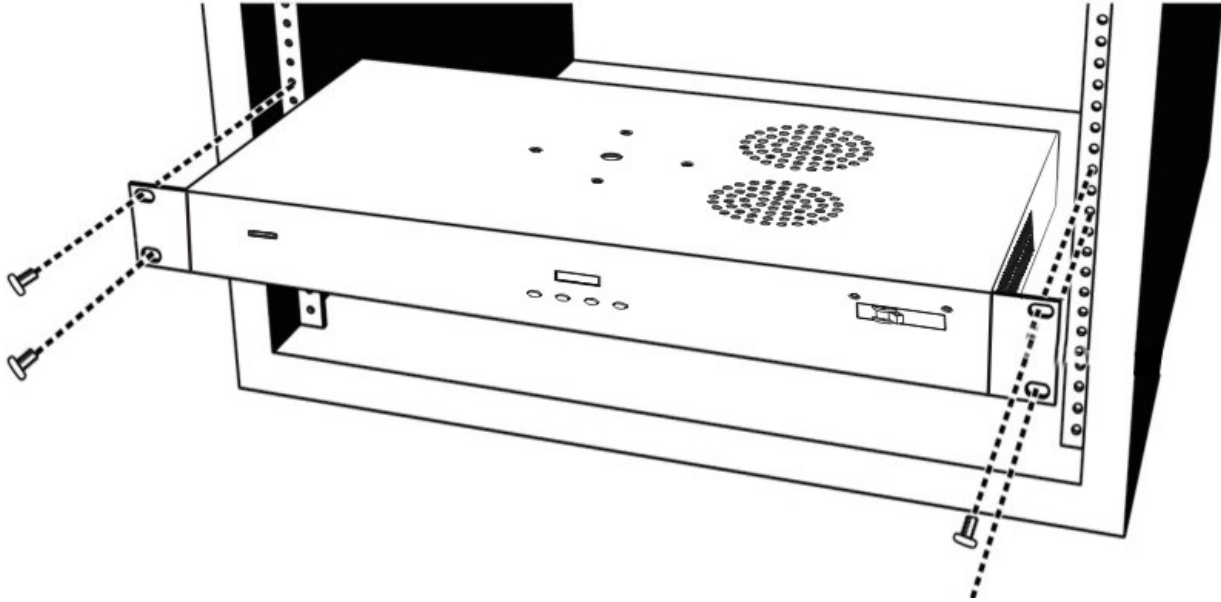

INSTALLATION


MULTIPLE DRIVERS

Up to five (5) Pixie Driver 8000 devices may be daisy-chained directly together and linked to a single controller. See the image below for reference. Please note that the controller must be set to KlingNet, Art-net, or sACN control mode. **Do NOT daisy-chain more than five (5) devices directly together.**

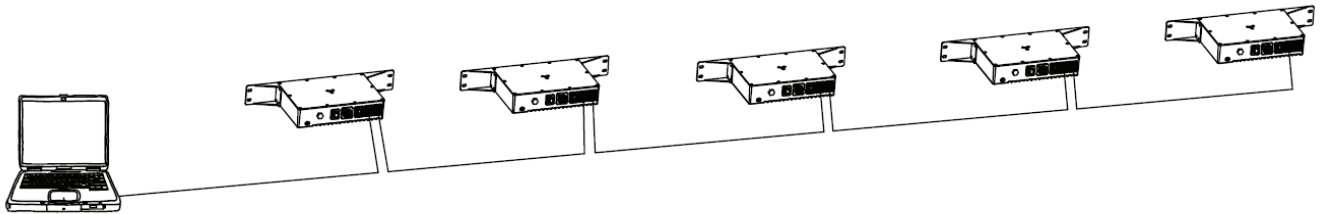

If more than five (5) devices are required, a one-gigabit ethernet switch may be used to expand the size of the network. However, even in this case, no more than ten (10) branches from the ethernet switch are allowable, with each branch containing up to five (5) daisy-chained devices. This permits a maximum of fifty (50) devices to be linked to a single controller, as shown in the image below.

Do NOT exceed this number of devices!

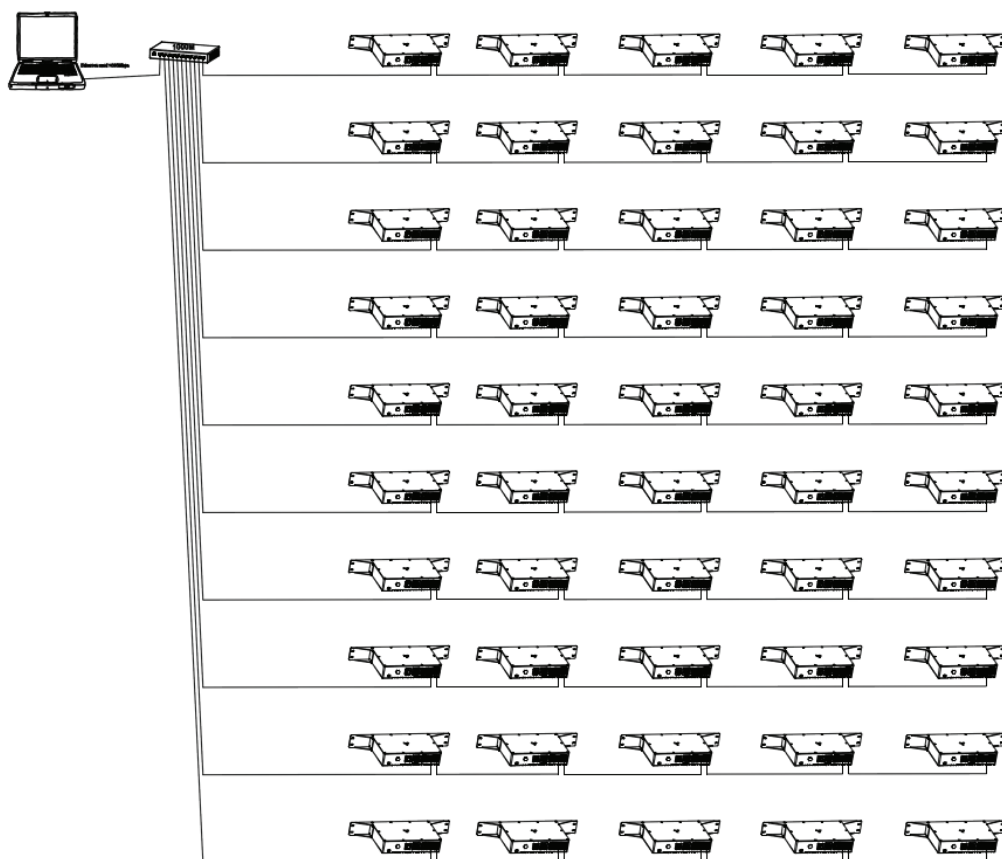

ALLOWABLE CABLE LENGTHS

16-AWG 4-pin extension cable may be used to link multiple devices. However, please take note of maximum allowable cable lengths, as listed below.

- Max length of cable connecting a controller and a device: 59 feet (18m)
- Max length of cable connecting two devices: 32 feet (10m)
- Max total cable length in a single chain: 98 feet (30m) including the lengths of the lighting strip(s)

DRIVER OUTPUT LIMITATIONS

There is a limitation to how many pixels can be controlled by each driver output port, which in turn determines the maximum number of lighting fixtures that can be controlled by a single output or driver.

The values listed in the following tables for number of fixtures per driver port/driver unit are representative of the maximum number of fixtures that can be connected if the fixtures used are all of the same model type, with individual pixel control.

For example, if you connect only Pixie Strip 30s to the driver, and operate the driver in Kling-Net mode, you can connect up to 34 units of that model type to each driver port. This is defined by the fact that each driver port can handle a maximum of 1020 pixels, and each Pixie Strip 30 fixture is made up of 30 pixels. Therefore, you have 1020 pixels per driver port, divided by 30 pixels per fixture, which equals 34 fixtures per driver port.

It is possible to mix and match Pixie Strip model types that are attached to a single driver port. In this case, the important thing to keep in mind is the maximum number of pixels per driver port.

As long as this value is not exceeded, any combination of Pixie Strip 30s, 60s, and 120s may be used.

PIXIE STRIP 30/60/120

MODEL	TOTAL PIXELS	TOTAL CONTROL CHAN.	KLING-NET MAX PIXELS PER PORT = 1020 MAX PIXELS PER DRIVER = 8160			
			MAX FIXTURES per DRIVER PORT	MAX PIXELS per DRIVER PORT	MAX FIXTURES per DRIVER UNIT	MAX PIXELS per DRIVER UNIT
Pixie Strip 30	30	90	34	1020	272	8160
Pixie Strip 60	60	180	17	1020	136	8160
Pixie Strip 120	120	360	8	960	64	7680

MODEL	TOTAL PIXELS	TOTAL CONTROL CHAN.	ARTNET / sACN MAX PIXELS PER PORT = 170 MAX PIXELS PER DRIVER = 1360			
			MAX FIXTURES per DRIVER PORT	MAX PIXELS per DRIVER PORT	MAX FIXTURES per DRIVER UNIT	MAX PIXELS per DRIVER UNIT
Pixie Strip 30	30	90	5	150	40	1200
Pixie Strip 60	60	180	2	120	16	960
Pixie Strip 120	120	360	1	120	8	960

DRIVER OUTPUT LIMITATIONS

Your Pixie Driver 8000 is programmed not to allow Pixie Strip fixtures to be added in such a way that the maximum number of pixels per port would be exceeded. This is done by limiting the number of Pixie Strip units that can be selected in the System Menu based on what has already been set up on the unit.

If we look at the example from the previous section, where 34 Pixie Strip 30s have been set up on a single port in Kling-Net mode, the System Menu will not allow any further fixtures to be set up on that port, regardless of model. This is because 34 fixtures, times 30 pixels per fixture, occupies 1020 pixels. If we then tried to set up a Pixie Strip 60, the System Menu would not allow any values other than “0” to be selected, because the port has no remaining free pixel capacity.

If you are having trouble adding the desired number of fixtures to a driver port, double check the number of fixtures of other Pixie Strip models that have been set up to see if they are using up all of the available pixel space on that port.

PIXELS IN USE		PIXELS FREE
34 x Pixie Strip 30	1020 pixels	1020 pixel capacity - 1020 pixels in use <hr/> 0 pixels free
0 x Pixie Strip 60	0 pixels	
0 x Pixie Strip 120	0 pixels	
	1020 total pixels in use	

In this case, we would first need to “make room” on this driver port by reducing the number of Pixie Strip 30s that are set up. If we reduce the number of Pixie Strip 30s by two units, we then have a total free pixel capacity of 60 pixels on this port.

PIXELS IN USE		PIXELS FREE
32 x Pixie Strip 30	960 pixels	1020 pixel capacity - 960 pixels in use <hr/> 60 pixels free
0 x Pixie Strip 60	0 pixels	
0 x Pixie Strip 120	0 pixels	
	960 total pixels in use	

Now that we have freed up pixels on this driver port, we are able to add the Pixie Strip 60, as desired. The System Menu now allows you to increase the number of Pixie Strip 60s on this driver port to 1, *but it will not allow you to increase the number any higher* because there are not enough pixels free to add more than 1 Pixie Strip 60. Notice, too, that the only selectable value for Pixie Strip 120s is “0” due to the fact that 60 free pixels is not enough to run a single Pixie Strip 120.

PIXELS IN USE		PIXELS FREE
32 x Pixie Strip 30	960 pixels	1020 pixel capacity - 1020 pixels in use <hr/> 0 pixels free
1 x Pixie Strip 60	60 pixels	
0 x Pixie Strip 120	0 pixels	
	1020 total pixels in use	

If you are having trouble adding the desired number of fixtures to a driver port, double check the number of fixtures of other Pixie Strip models that have been set up to see if they are using up all of the available pixel space on that port.

RGB PIXEL CONTROL

This feature gives the user the ability to adjust the RGB Pixel Control configuration of the device. Individual pixels may be controlled independently for finer control over the resolution of the device's lighting display. Alternately, multiple individual pixels may be grouped together under a common set of control channels in order to reduce the number of required control channels. This also reduces the effective pixel count for each fixture, thereby allowing an increased number of fixtures to be operated off of the same driver port (see the **Driver Output Limitations** section). The downside to this is the reduced resolution of the lighting display.

For example, if the user is setting up a Pixie Strip 30 containing thirty (30) individual pixels, the finest level of control would be 1x30, which signifies 30 groups of 1 pixel each. In a 1x30 pixel control configuration, each of the 30 pixels is controlled independently, giving the lighting display a fine degree of resolution. However, each individual pixel requires 3 control channels (Red, Green, and Blue), and therefore 90 control channels are required to operate the device in this configuration, in addition to the need for the driver port to have free capacity to control at least 30 pixels.

If using fewer control channels or less driver port pixel capacity is desired, the user may opt for a different pixel control configuration, such as 2x15. This configuration separates the lighting display into 15 groups, each containing 2 individual pixels, with each group being controlled by a single set of control channels. Thus, the requirement for number of control channels is reduced to 45 (15 groups each requiring 3 control channels for Red, Green, and Blue). Moreover, each group of 2 pixels can now be treated effectively as a single large pixel, reducing the required driver port free pixel capacity to just 15 pixels. **This is particularly useful when operating in Art-Net or sACN mode, where each driver port can accommodate a relatively limited number of pixels.**

RGB PIXEL CONTROL

PIXEL CONTROL MODES, FULL LIST

Pixel Count	Pixel Group Options
1	1x1
2	1x2, 2x1
3	1x3, 3x1
4	1x4, 2x2, 4x1
5	1x5, 5x1
6	1x6, 2x3, 3x2, 6x1
7	1x7
8	1x8, 2x4, 4x2, 8x1
9	1x9, 3x3, 9x1
10	1x10, 2x5, 5x2, 10x1
11	1x11
12	1x12, 2x6, 3x4, 4x3, 6x2, 12x1
13	1x13
14	1x14, 2x7, 7x2, 14x1
15	1x15, 3x5, 5x3, 15x1
16	1x16, 2x8, 4x4, 8x2, 16x1
17	1x17
18	1x18, 2x9, 3x6, 6x3, 9x2, 18x1
19	1x19
20	1x20, 2x10, 4x5, 5x4, 10x2, 20x1
21	1x21, 3x7, 7x3, 21x1
22	1x22, 2x11, 11x2, 22x1
23	1x23
24	1x24, 2x12, 3x8, 4x6, 6x4, 8x3, 12x2, 24x1
25	1x25, 5x5, 25x1
26	1x26, 2x13, 13x2, 26x1
27	1x27, 3x9, 9x3, 27x1
28	1x28, 2x14, 4x7, 7x4, 14x2, 28x1
29	1x29
30	1x30, 2x15, 3x10, 5x6, 6x5, 10x3, 15x2, 30x1
31	1x31
32	1x32, 2x16, 4x8, 8x4, 16x2, 32x1

Pixel Count	Pixel Group Options
33	1x33, 3x11, 11x3, 33x1
34	1x34, 2x17, 17x2, 34x1
35	1x35, 5x7, 7x5, 35x1
36	1x36, 2x18, 3x12, 4x9, 6x6, 9x4, 12x3, 18x2, 36x1
37	1x37
38	1x38, 2x19, 19x2, 38x1
39	1x39, 3x13, 13x3, 39x1
40	1x40, 2x20, 4x10, 5x8, 8x5, 10x4, 20x2, 40x1
41	1x41
42	1x42, 2x21, 3x14, 6x7, 7x6, 14x3, 21x2, 42x1
43	1x43
44	1x44, 2x22, 4x11, 11x4, 22x2, 44x1
45	1x45, 3x15, 5x9, 9x5, 15x3, 45x1
46	1x46, 2x23, 23x2, 46x1
47	1x47
48	1x48, 2x24, 3x16, 4x12, 6x8, 8x6, 12x4, 16x3, 24x2, 48x1
49	1x49, 7x7, 49x1
50	1x50, 2x25, 5x10, 10x5, 25x2, 50x1
51	1x51, 3x17, 17x3, 51x1
52	1x52, 2x26, 4x13, 13x4, 26x2, 52x1
53	1x53
54	1x54, 2x27, 3x18, 6x9, 9x6, 18x3, 27x2, 54x1
55	1x55, 5x11, 11x5, 55x1
56	1x56, 2x28, 4x14, 7x8, 8x7, 14x4, 28x2, 56x1
57	1x57, 3x19, 19x3, 57x1
58	1x58, 2x29, 29x2, 58x1
59	1x59
60	1x60, 2x30, 3x20, 4x15, 5x12, 6x10, 10x6, 12x5, 15x4, 20x3, 30x2, 60x1

RGB PIXEL CONTROL

PIXEL CONTROL MODES, FULL LIST

Pixel Count	Pixel Group Options
61	1x61
62	1x62, 2x31, 31x2, 62x1
63	1x63, 3x21, 7x9, 9x7, 21x3, 63x1
64	1x64, 2x32, 4x16, 8x8, 16x4, 32x2, 64x1
65	1x65, 5x13, 13x5, 65x1
66	1x66, 2x33, 3x22, 6x11, 11x6, 22x3, 33x2, 66x1
67	1x67
68	1x68, 2x34, 4x17, 17x4, 34x2, 68x1
69	1x69, 3x23, 23x3, 69x1
70	1x70, 2x35, 5x14, 7x10, 10x7, 14x5, 35x2, 70x1
71	1x71
72	1x72, 2x36, 3x24, 4x18, 6x12, 8x9, 9x8, 12x6, 18x4, 24x3, 36x2, 72x1
73	1x73
74	1x74, 2x37, 37x2, 74x1
75	1x75, 3x25, 5x15, 15x5, 25x3, 75x1
76	1x76, 2x38, 4x19, 19x4, 38x2, 76x1
77	1x77, 7x11, 11x7, 77x1
78	1x78, 2x39, 3x26, 6x13, 13x6, 26x3, 39x2, 78x1
79	1x79
80	1x80, 2x40, 4x20, 5x16, 8x10, 10x8, 16x5, 20x4, 40x2, 80x1
81	1x81, 3x27, 9x9, 27x3, 81x1
82	1x82, 2x41, 41x2, 82x1
83	1x83
84	1x84, 2x42, 3x28, 4x21, 6x14, 7x12, 12x7, 14x6, 21x4, 28x3, 42x2, 84x1
85	1x85, 5x17, 17x5, 85x1
86	1x86, 2x43, 43x2, 86x1
87	1x87, 3x29, 29x3, 87x1
88	1x88, 2x44, 4x22, 8x11, 11x8, 22x4, 44x2, 88x1
89	1x89

Pixel Count	Pixel Group Options
90	1x90, 2x45, 3x30, 5x18, 6x15, 9x10, 10x9, 15x6, 18x5, 30x3, 45x2, 90x1
91	1x91, 7x13, 13x7, 91x1
92	1x92, 2x46, 4x23, 23x4, 46x2, 92x1
93	1x93, 3x31, 31x3, 93x1
94	1x94, 2x47, 47x2, 94x1
95	1x95, 5x19, 19x5, 95x1
96	1x96, 2x48, 3x32, 4x24, 6x16, 8x12, 12x8, 16x6, 24x4, 32x3, 48x2, 96x1
97	1x97
98	1x98, 2x49, 7x14, 14x7, 49x2, 98x1
99	1x99, 3x33, 9x11, 11x9, 33x3, 99x1
100	1x100, 2x50, 4x25, 5x20, 10x10, 20x5, 25x4, 50x2, 100x1
101	1x101
102	1x102, 2x51, 3x34, 6x17, 17x6, 34x3, 51x2, 102x1
103	1x103
104	1x104, 2x52, 4x26, 8x13, 13x8, 26x4, 52x2, 104x1
105	1x105, 3x35, 5x21, 7x15, 15x7, 21x5, 35x3, 105x1
106	1x106, 2x53, 53x2, 106x1
107	1x107
108	1x108, 2x54, 3x36, 4x27, 6x18, 9x12, 12x9, 18x6, 27x4, 36x3, 54x2, 108x1
109	1x109
110	1x110, 2x55, 5x22, 10x11, 11x10, 22x5, 55x2, 110x1
111	1x111, 3x37, 37x3, 111x1
112	1x112, 2x56, 4x28, 7x16, 8x14, 14x8, 16x7, 28x4, 56x2, 112x1
113	1x113
114	1x114, 2x57, 3x38, 6x19, 19x6, 38x3, 57x2, 114x1
115	1x115, 5x23, 23x5, 115x1
116	1x116, 2x58, 4x29, 29x4, 58x2, 116x1
117	1x117, 3x39, 9x13, 13x9, 39x3, 117x1

RGB PIXEL CONTROL

PIXEL CONTROL MODES, FULL LIST


Pixel Count	Pixel Group Options
118	1x118, 2x59, 59x2, 118x1
119	1x119, 7x17, 17x7, 119x1
120	1x120, 2x60, 3x40, 4x30, 5x24, 6x20, 8x15, 10x12, 12x10, 15x8, 20x6, 24x5, 30x4, 40x3, 60x2, 120x1
121	1x121, 11x11, 121x1
122	1x122, 2x61, 61x2, 122x1
123	1x123, 3x41, 41x3, 123x1
124	1x124, 2x62, 4x31, 31x4, 62x2, 124x1
125	1x125, 5x25, 25x5, 125x1
126	1x126, 2x63, 3x42, 6x21, 7x18, 9x14, 14x9, 18x7, 21x6, 42x3, 63x2, 126x1
127	1x127
128	1x128, 2x64, 4x32, 8x16, 16x8, 32x4, 64x2, 128x1
129	1x129, 3x43, 43x3, 129x1
130	1x130, 2x65, 5x26, 10x13, 13x10, 26x5, 65x2, 130x1
131	1x131
132	1x132, 2x66, 3x44, 4x33, 6x22, 11x12, 12x11, 22x6, 33x4, 44x3, 66x2, 132x1
133	1x133, 7x19, 19x7, 133x1
134	1x134, 2x67, 67x2, 134x1
135	1x135, 3x45, 5x27, 9x15, 15x9, 27x5, 45x3, 135x1
136	1x136, 2x68, 4x34, 8x17, 17x8, 34x4, 68x2, 136x1
137	1x137
138	1x138, 2x69, 3x46, 6x23, 23x6, 46x3, 69x2, 138x1
139	1x139
140	1x140, 2x70, 4x35, 5x28, 7x20, 10x14, 14x10, 20x7, 28x5, 35x4, 70x2, 140x1
141	1x141, 3x47, 47x3, 141x1
142	1x142, 2x71, 71x2, 142x1
143	1x143, 11x13, 13x11, 143x1
144	1x144, 2x72, 3x48, 6x36, 8x24, 9x18, 12x16, 16x12, 18x9, 24x8, 36x6, 48x3, 72x2, 144x1
145	1x145, 5x29, 29x5, 145x1

Pixel Count	Pixel Group Options
146	1x146, 2x73, 73x2, 146x1
147	1x147, 3x49, 7x21, 21x7, 49x3, 147x1
148	1x148, 2x74, 4x37, 37x4, 74x2, 148x1
149	1x149
150	1x150, 2x75, 3x50, 5x30, 6x25, 10x15, 15x10, 25x6, 30x5, 50x3, 75x2, 150x1
151	1x151
152	1x152, 2x76, 4x38, 8x19, 19x8, 38x4, 76x2, 152x1
153	1x153, 3x51, 9x17, 17x9, 51x3, 153x1
154	1x154, 2x77, 7x22, 11x14, 14x11, 22x7, 77x2, 154x1
155	1x155, 5x31, 31x5, 155x1
156	1x156, 2x78, 3x52, 4x39, 6x26, 12x13, 13x12, 26x6, 39x4, 52x3, 78x2, 156x1
157	1x157
158	1x158, 2x79, 79x2, 158x1
159	1x159, 3x53, 53x3, 159x1
160	1x160, 2x80, 4x40, 5x32, 8x20, 10x16, 16x10, 20x8, 32x5, 40x4, 80x2, 160x1
161	1x161, 7x23, 23x7, 161x1
162	1x162, 2x81, 3x54, 6x27, 9x18, 18x9, 27x6, 54x3, 81x2, 162x1
163	1x163
164	1x164, 2x82, 4x41, 41x4, 82x2, 164x1
165	1x165, 3x55, 5x33, 11x15, 15x11, 33x5, 55x3, 165x1
166	1x166, 2x83, 83x2, 166x1
167	1x167
168	1x168, 2x84, 3x56, 4x42, 6x28, 7x24, 8x21, 12x14, 14x12, 21x8, 24x7, 28x6, 42x4, 56x3, 84x2, 168x1
169	1x169, 13x13, 169x1
170	1x170, 2x85, 5x34, 10x17, 17x10, 34x5, 85x2, 170x1

CONTROL PANEL

The device includes an easy to navigate system menu control panel display where all necessary settings and adjustments are made (see image below).

- The **MODE** button is used to cycle through main menu options, or to return to the previous menu.
- The **SETUP** button is used to select an option in either the main menu or the sub-menu of any main menu item, and to cycle through the sub-menu options.
- The **UP** and **DOWN** buttons are used to adjust the values of the sub-menu options.

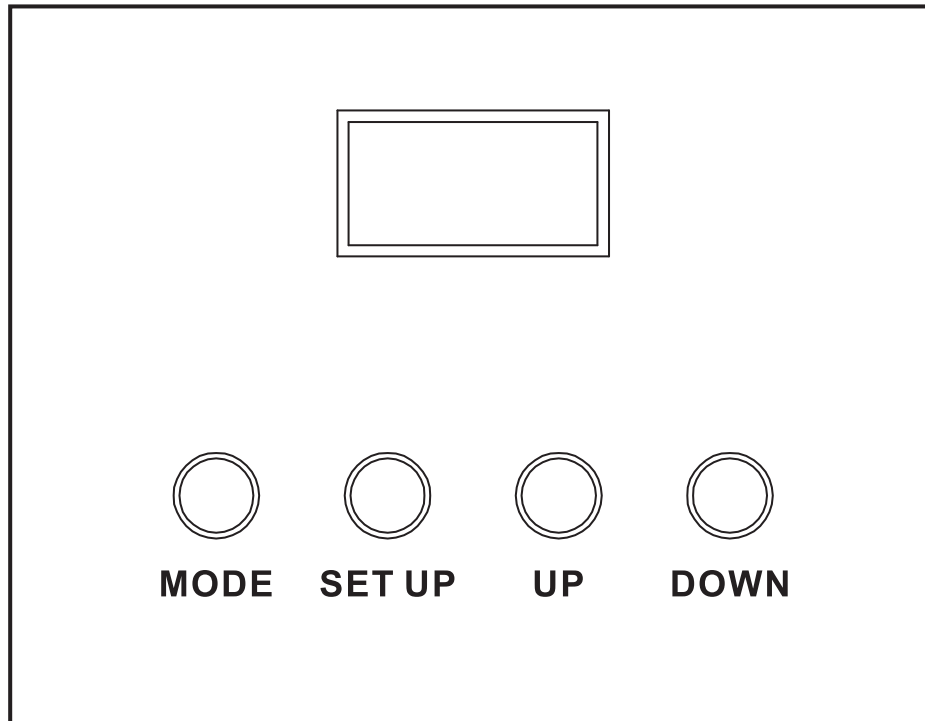

SYSTEM MENU

MANUAL CONTROL	Red	000 - 255			
	Green	000 - 255			
	Blue	000 - 255			
	Port1 EN/DIS	Enable / Disable			
	Port2 EN/DIS	Enable / Disable			
	Port3 EN/DIS	Enable / Disable			
	Port4 EN/DIS	Enable / Disable			
	Port5 EN/DIS	Enable / Disable			
	Port6 EN/DIS	Enable / Disable			
	Port7 EN/DIS	Enable / Disable			
	Port8 EN/DIS	Enable / Disable			
KLINGNET	Port1 Out Set	Pixie Strip Setup	30 Number xx	00 - 34	
			60 Number xx	00 - 17	Default = 10
			120 Number xx	00 - 08	
	Port2 Out Set	Pixie Strip Setup	30 Number xx	00 - 34	
			60 Number xx	00 - 17	Default = 10
			120 Number xx	00 - 08	

	Port8 Out Set	Pixie Strip Setup	30 Number xx	00 - 34	
			60 Number xx	00 - 17	Default = 10
			120 Number xx	00 - 08	
	Pixie Groups 1&2	30x1 RGB Pixels, 15x2 RGB Pixels...2x15 RGB Pixels		Display if this port group has at least one Pixie Strip 30	
		60x1 RGB Pixels , 30x2 RGB Pixels...2x30 RGB Pixels		Display if this port group has at least one Pixie Strip 30 and at least one Pixie Strip 60	
		120x1 RGB Pixels, 60x2 RGB Pixels...2x60 RGB Pixels		Display if this port group contains no Pixie Strip 30s and no Pixie Strip 60s	

CONTINUED ON NEXT PAGE

SYSTEM MENU

KLINGNET (continued)	Pixie Groups 3&4	30x1 RGB Pixels, 15x2 RGB Pixels...2x15 RGB Pixels	Display if this port group has at least one Pixie Strip 30
		60x1 RGB Pixels , 30x2 RGB Pixels...2x30 RGB Pixels	Display if this port group has at least one Pixie Strip 30 and at least one Pixie Strip 60
		120x1 RGB Pixels, 60x2 RGB Pixels...2x60 RGB Pixels	Display if this port group contains no Pixie Strip 30s and no Pixie Strip 60s
	Pixie Groups 5&6	30x1 RGB Pixels, 15x2 RGB Pixels...2x15 RGB Pixels	Display if this port group has at least one Pixie Strip 30
		60x1 RGB Pixels , 30x2 RGB Pixels...2x30 RGB Pixels	Display if this port group has at least one Pixie Strip 30 and at least one Pixie Strip 60
		120x1 RGB Pixels, 60x2 RGB Pixels...2x60 RGB Pixels	Display if this port group contains no Pixie Strip 30s and no Pixie Strip 60s
	Pixie Groups 7&8	30x1 RGB Pixels, 15x2 RGB Pixels...2x15 RGB Pixels	Display if this port group has at least one Pixie Strip 30
		60x1 RGB Pixels , 30x2 RGB Pixels...2x30 RGB Pixels	Display if this port group has at least one Pixie Strip 30 and at least one Pixie Strip 60
		120x1 RGB Pixels, 60x2 RGB Pixels...2x60 RGB Pixels	Display if this port group contains no Pixie Strip 30s and no Pixie Strip 60s

CONTINUED ON NEXT PAGE

SYSTEM MENU

ARTNET	Port 1 Out Set	Pixie Strip Setup	30 Number xx	00 - xx		
			60 Number xx	00 - xx	Default = 01	
			120 Number xx	00 - xx		
		Pixie Groups Set	30x1 RGB Pixels, 15x2 RGB Pixels...2x15 RGB Pixels		Display if port has at least one Pixie Strip 30	
			60x1 RGB Pixels , 30x2 RGB Pixels...2x30 RGB Pixels		Display if port has no Pixie Strips 30s and at least one Pixie Strip 60	
			120x1 RGB Pixels, 60x2 RGB Pixels...2x60 RGB Pixels		Display if port has no Pixie Strip 30s or Pixie Strip 60s	
		IP Address Setup	xxx:xxx:xxx:xxx		Ports 1&2, 3&4, 5&6, and 7&8 share the same IP address	
		Universe Setup	00001 - 32768			
	
		Port 8 Out	Pixie Strip Setup	30 Number xx	00 - xx	
	60 Number xx			00 - xx	Default = 01	
	120 Number xx			00 - xx		
	Pixie Groups Set		30x1 RGB Pixels, 15x2 RGB Pixels...2x15 RGB Pixels		Display if port has at least one Pixie Strip 30	
			60x1 RGB Pixels , 30x2 RGB Pixels...2x30 RGB Pixels		Display if port has no Pixie Strips 30s and at least one Pixie Strip 60	
			120x1 RGB Pixels, 60x2 RGB Pixels...2x60 RGB Pixels		Display if port has no Pixie Strip 30s or Pixie Strip 60s	
	IP Address Setup		xxx:xxx:xxx:xxx		Ports 1&2, 3&4, 5&6, and 7&8 share the same IP address	
	Universe Setup		00001 - 32768			

CONTINUED ON NEXT PAGE

SYSTEM MENU

sACN	Port 1 Out Set	Pixie Strip Setup	30 Number xx	00 - xx	
			60 Number xx	00 - xx	Default = 01
			120 Number xx	00 - xx	
		Pixie Groups Set	30x1 RGB Pixels, 15x2 RGB Pixels...2x15 RGB Pixels	Display if port has at least one Pixie Strip 30	
			60x1 RGB Pixels , 30x2 RGB Pixels...2x30 RGB Pixels	Display if port has no Pixie Strips 30s and at least one Pixie Strip 60	
			120x1 RGB Pixels, 60x2 RGB Pixels...2x60 RGB Pixels	Display if port has no Pixie Strip 30s or Pixie Strip 60s	
		Universe Setup	00001 - 64000		

	Port 8 Out Set	Pixie Strip Setup	30 Number xx	00 - xx	
			60 Number xx	00 - xx	Default = 01
			120 Number xx	00 - xx	
		Pixie Groups Set	30x1 RGB Pixels, 15x2 RGB Pixels...2x15 RGB Pixels	Display if port has at least one Pixie Strip 30	
			60x1 RGB Pixels , 30x2 RGB Pixels...2x30 RGB Pixels	Display if port has no Pixie Strips 30s and at least one Pixie Strip 60	
			120x1 RGB Pixels, 60x2 RGB Pixels...2x60 RGB Pixels	Display if port has no Pixie Strip 30s or Pixie Strip 60s	
		Universe Setup	00001 - 64000		

CONTINUED ON NEXT PAGE

SYSTEM MENU

PROGRAMS	Program Play	Program xxx	001 - 016		
		Speed xxx	001 - 016		
		Fade xxx	001 - 016		
		Phase Time xxx	001 - 016		
	Port1 Out Set	30 Number xx	00 - 34		
		60 Number xx	00 - 17	Default = 10	
		120 Number xx	00 - 08		
	
	Port8 Out Set	30 Number xx	00 - 34		
		60 Number xx	00 - 17	Default = 10	
120 Number xx		00 - 08			
ARTNET & KLINGNET	Klingnet Dis/En	Enable / Disable			
	Klingnet Set	Port1 Out Set	30 Number xx	00 - 34	
			60 Number xx	00 - 17	Default = 10
			120 Number xx	00 - 08	
	
		Port8 Out Set	30 Number xx	00 - 34	
	60 Number xx		00 - 17	Default = 10	
	120 Number xx		00 - 08		
	Artnet Set	Port1 Out Set	IP Address Setup	xxx:xxx:xxx:xxx	Note: Ports 1&2, 3&4, 5&6, and 7&8 share the same network IP address
			Universe Setup	00001 - 32768	
		
		Port8 Out Set	IP Address Setup	xxx:xxx:xxx:xxx	
			Universe Setup	00001 - 32768	
SETUP OPTIONS	Rotate Display	No / Yes			
	Factory Restore	No / Yes			
SOFTWARE VERSIONS	Port1&2 Vx.xx				
	Port3&4 Vx.xx				
	Port5&6 Vx.xx				
	Port7&8 Vx.xx				
SERVICE	Passcode = 011	Update Software	No / Yes		

MAINTENANCE GUIDELINES



DISCONNECT POWER BEFORE PERFORMING ANY MAINTENANCE!

MAINTENANCE

Regular inspections are recommended to ensure proper function and extended life. There are no user serviceable parts inside this device. Please refer all other service issues to an authorized ADJ service technician. Should you need any spare parts, please order genuine parts from your local ADJ dealer.

Please refer to the following points during routine inspections:

- A. A detailed electrical check by an approved electrical engineer every three months, to make sure the circuit contacts are in good condition and prevent overheating.
- B. Be sure all screws and fasteners are securely tightened at all times. Loose screws may fall out during normal operation, resulting in damage or injury as larger parts could fall.
- C. Check for any deformations on the housing, rigging hardware, and rigging points (ceiling, suspension, trussing). Deformations in the housing could allow for dust to enter into the fixture. Damaged rigging points or unsecured rigging could cause the fixture to fall and seriously injure a person(s).
- D. Electric power supply cables must not show any damage, material fatigue, or sediments.

NEVER remove the ground prong from the power cable.

SOFTWARE UPDATES

For software updates, please contact ADJ service to obtain a software uploader and detailed instructions. Refer to the ***Introduction*** section of this manual for contact information.

SPECIFICATIONS

Control Features:

- Power / data supply for ADJ Pixie Strip 30, Pixie Strip 60, and Pixie Strip 120
- Manual RGB mode
- Internal programs
- Manual Dimming and Strobe Control
- Full Pixel Mapping Control
- Drives up to 8,160 Pixels via KlingNet (1,020 Pixels per port)
- Drives up to 1,360 Pixels via Art-Net and sACN (170 Pixels per port)
- OLED screen with 4-button menu
- USB port for Firmware Updates

Control Quantity:

- KlingNet: (34) Pixie Strip 30's, (17) Pixie Strip 60's or (8) Pixie Strip 120's (Per port. Or any combination not exceeding 1,020 pixel per port)
- ArtNet: (5) Pixie Strip 30's, (2) Pixie Strip 60's or (1) Pixie Strip 120 (Per port. Or any combination not exceeding 170 pixel per port)
- sACN: (5) Pixie Strip 30's, (2) Pixie Strip 60's or (1) Pixie Strip 120 (Per port. Or any combination not exceeding 170 pixel per port)

Connections:

- Power: PowerLock Input
- Two KlingNet / Artnet ethernet ports
- Eight 4-pin DC24V power/data outputs to Pixie Strips

Mounting Options:

- Bolt to add a clamp to hang from truss (clamp and truss not included)
- Includes 19-inch rack mount ears
- Safety eye

Electrical:

- Multi-voltage operation: AC 100-240V, 50/60Hz
- Power Consumption: 1,600W max
- -4°F to 113°F (-20°C to 45°C)

Dimensions / Weight:


- Dimensions (LxWxH): 11.6" x 18.9" x 4.8" / 294x480x120mm
- Weight: 13.4 lbs. / 6.1 kg.

Approvals:

- CE I cETLus (Pending)

DIMENSIONS

Drawing not to scale

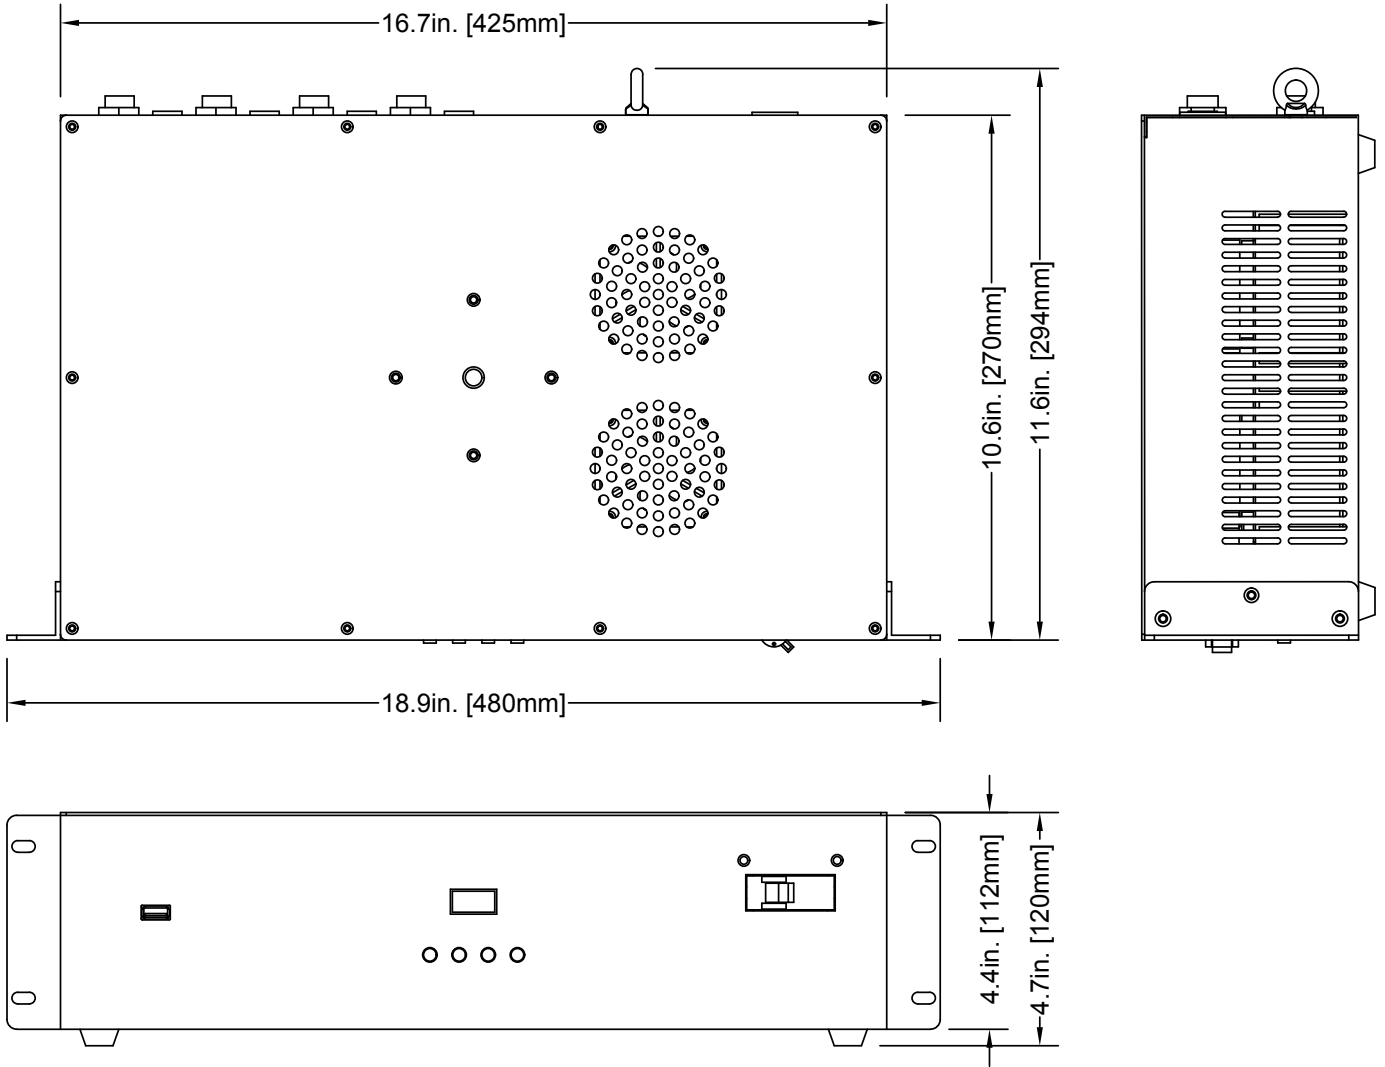

ACCESSORIES

Order Code	Description
PIX158	1-foot Pixie Strip Link Cable
PIX174	3-foot Pixie Strip Link Cable
PIX188	5-foot Pixie Strip Link Cable
PIX200	10-foot Pixie Strip Link Cable
PIX213	15-foot Pixie Strip Link Cable
PIX229	25-foot Pixie Strip Link Cable
PIX242	50-foot Pixie Strip Link Cable

